PIONEER®
The Art of Entertainment

Service Manual

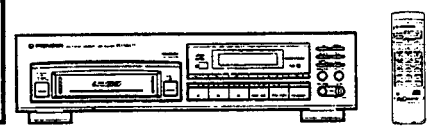

ORDER NO.
RRV1070

MULTI-PLAY COMPACT DISC PLAYER

PD-M603

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	Remarks
	PD-M603		
KUXJ	○	AC120V	
KCXJ	○	AC120V	

CONTENTS

1. SAFETY INFORMATION ····2
2. BLOCK DIAGRAM ····3
3. EXPLODED VIEWS, PACKING AND PARTS LIST ·4
4. FL INFORMATION ····10
5. SCHEMATIC DIAGRAM ····11
6. PCB CONNECTION DIAGRAM ····17
7. PCB PARTS LIST ····23
8. ADJUSTMENTS ····25
9. PANEL FACILITIES ····34
10. SPECIFICATIONS ····35

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

© PIONEER ELECTRONIC CORPORATION 1994

T – SSG FEB. 1994 Printed in Japan

4226

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).
When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

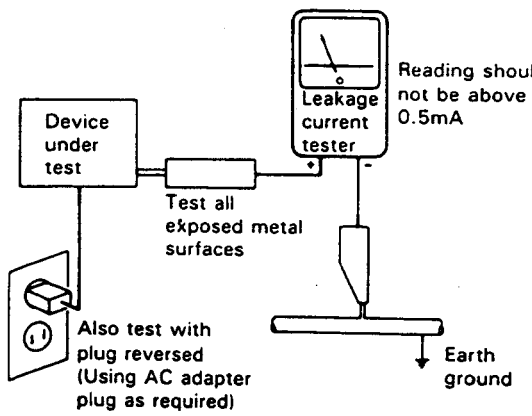
Leakage current tester
Reading should not be above 0.5mA
Device under test
Test all exposed metal surfaces
Also test with plug reversed (Using AC adapter plug as required)
Earth ground

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.
The use of a substitute replacement component which dose not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. BLOCK DIAGRAM

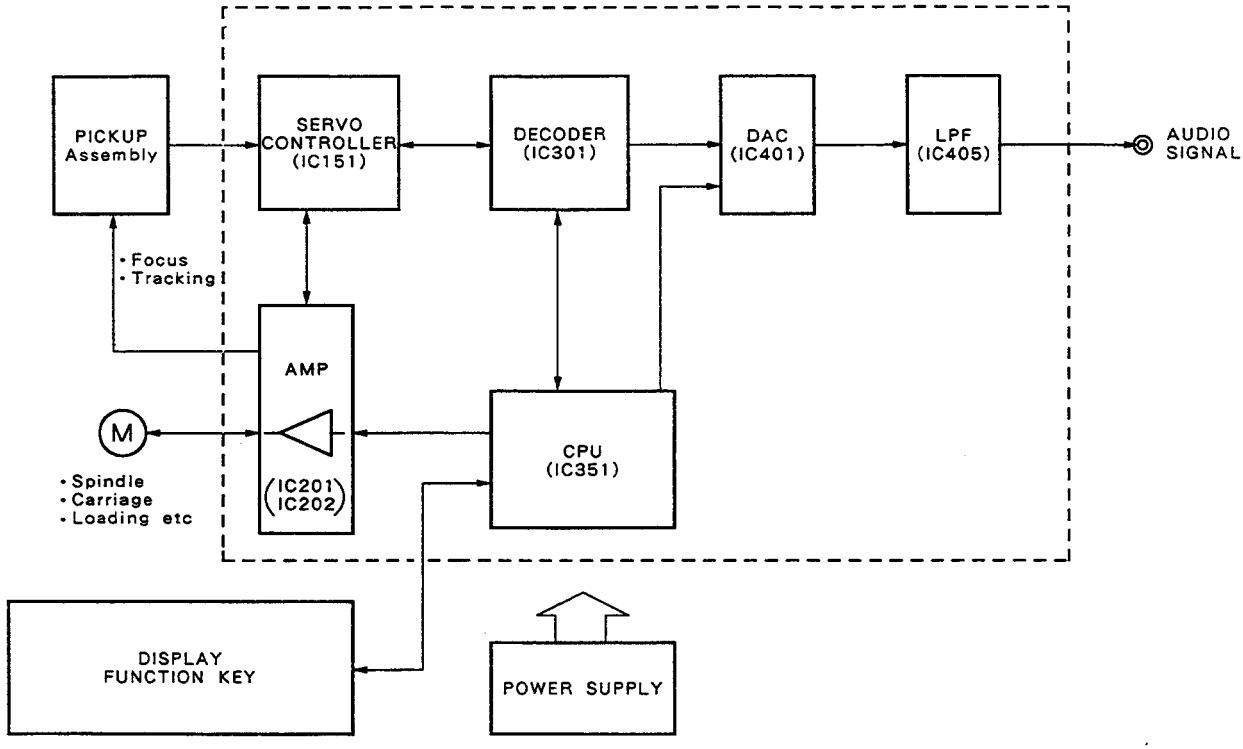

3. EXPLODED VIEWS, PACKING AND PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

3.1 EXTERIOR AND PACKING

Parts List

Mark	No.	Description	Part No.
⚠	1	Strain Relief (PD – M603/KUXJ)	CM – 22C
⚠	1	Strain Relief (PD – M603/KCXJ)	CM – 22
	2	32P F.F.C/30V	PDD1125
⚠	3	Power Transformer	PTT1237
⚠	4	Power Cord with Plug (PD – M603/KUXJ)	PDG1002
⚠	4	Power Cord with Plug (PD – M603/KCXJ)	RDG1010
	5	Bonnet	PYY1149
	6	Insulator	PNW1912
	7	Screw	IBZ30P080FCC
	8	Knob (Headphone)	PAC1707
	9	Function Panel	PNW2459
	10	Mode Button	PAC1709
	11	Name Plate	PAM1608
	12	Power Button	PAC1719
	13	Screw	BBZ26P120FZK
	14	Function Button	PAC1717
	15	Display Window	PAM1607
	16	Spring (Door)	PBH1022
	17	LED Lens	PNW2019
	18	Door BK	PNW2264
NSP	19	Headphone Board Assy	PWZ2524
⚠	20	Mother Board Assy	PWM1866
	21	Screw	BBZ30P060FMC
	22	Screw	BBZ30P080FZK
	23	Screw	PPZ30P120FMC
	24	Screw	FBT40P080FZK
	25	Screw	IBZ30P060FCC
	26	Screw	IBZ30P100FCC
	27	Screw	IBZ30P180FMC
	28	Screw	PDZ30P050FMC
	29	Function Board Assy	PWZ2814
	30	Ten Key 2	PAC1735
	31	65 Label (PD – M603/KUXJ Only)	ORW1069
	32	Binder	Z09 – 056
	33	Rear Base (PD – M603/KUXJ)	PNA2095
	33	Rear Base (PD – M603/KCXJ)	PNA2096
	34	Earth Lead Unit	XDF – 502
NSP	35	PCB Mould	AMR1525
NSP	36	Under Base	PNA1751
NSP	37	Multi Mechanism Assy	PXA1469
NSP	38	Flat Cable (6P)	D20PYY0615E
NSP	39	Switch Board Assy	PWZ2520
	40	Connection Cord with Mini Plug (for SR cord)	PDE – 319
	41	Connection Cord with Pin Plug (for Audio)	PDE1109
	42	Remote Control Unit	PWW1068
	43	Battery Cover	PZN1010
	44	Magazine Assy	PXA1504
	45	Operating Instructions (English) (PD – M603/KUXJ)	PRB1209
	45	Operating Instructions (English/French) (PD – M603/KCXJ)	PRE1198
	46	Styrol Protector (F)	PHA1228
	47	Styrol Protector (R)	PHA1229
	48	CD Packing Case (PD – M603/KUXJ)	PHG2014
	48	CD Packing Case (PD – M603/KCXJ)	PHG2015
	49	Mirror Mat Sheet	Z23 – 007
	50	PP Case	PYY1169
	51	Bag	Z21 – 038
NSP	52	Dry Cell Battery (R03, AAA)	VEM – 022

Packing

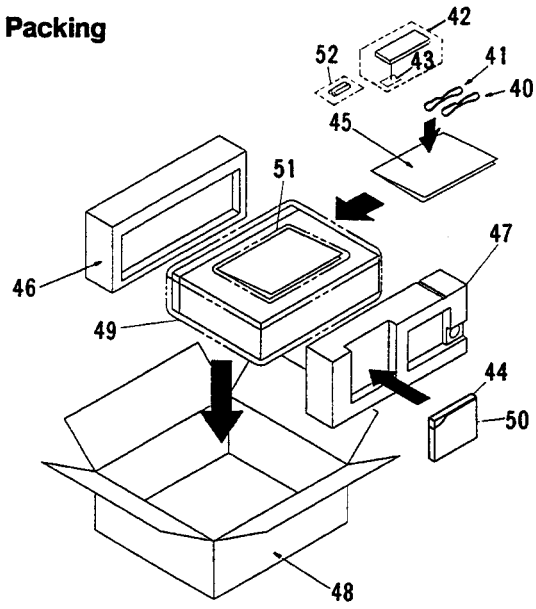

Exterior

NOTE: Screws adjacent to ▼ mark on the product are used for disassembly.

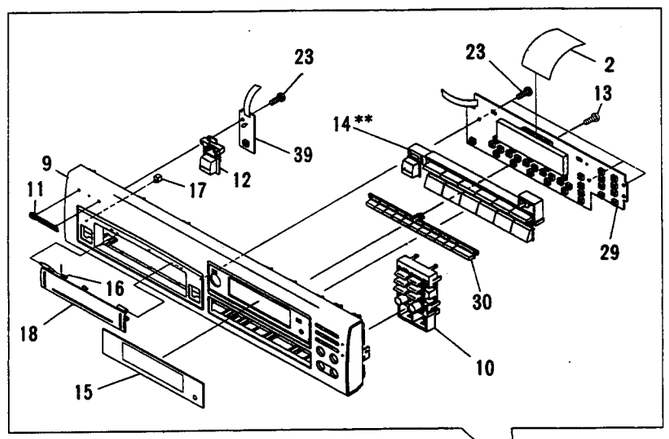

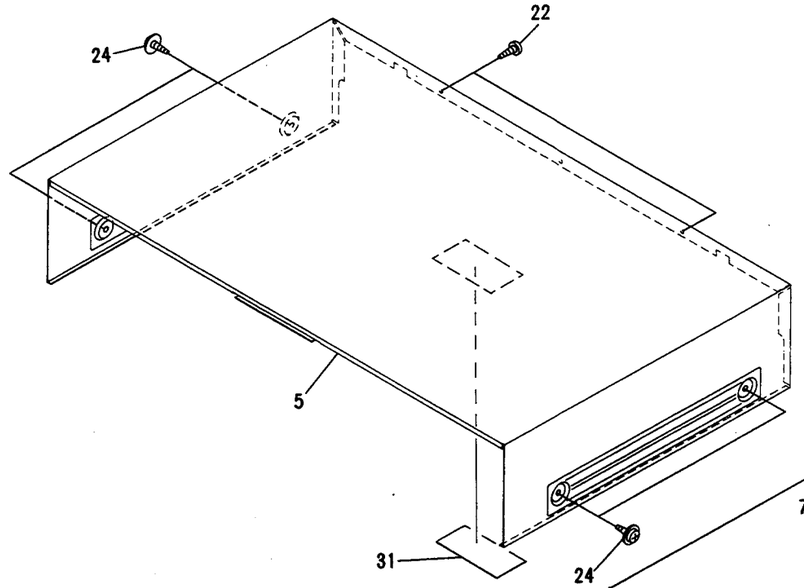

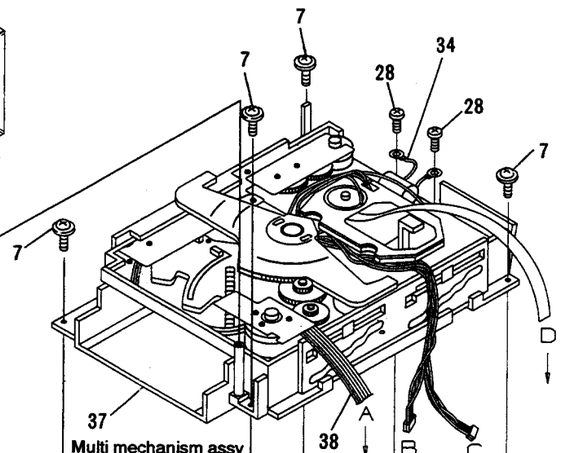

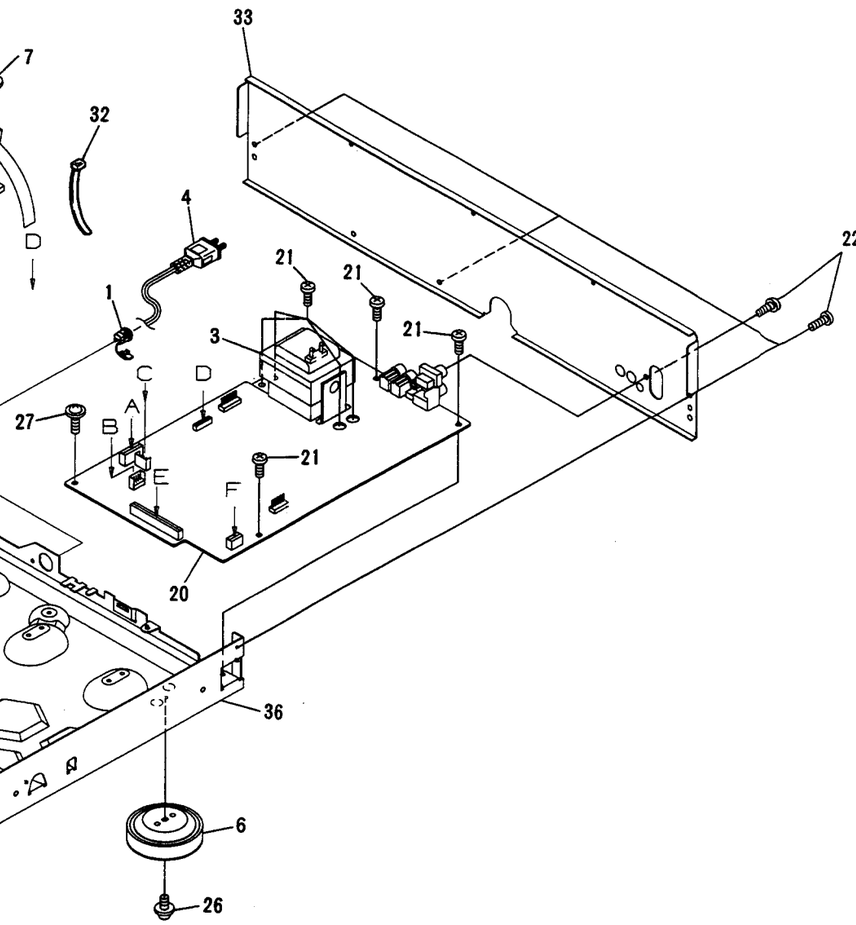

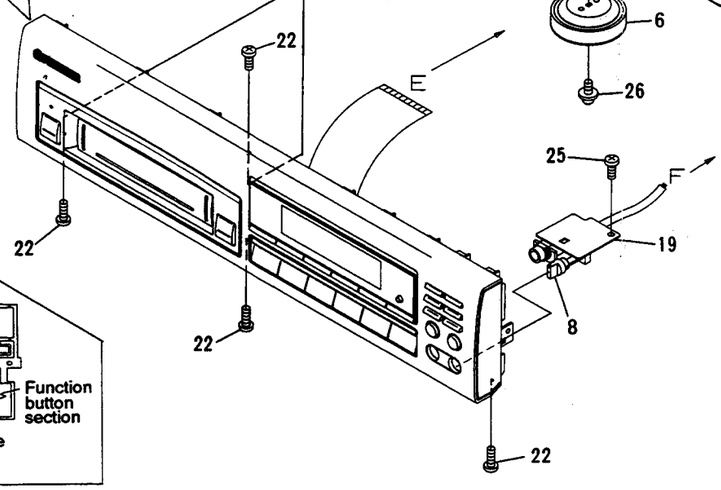

** Cut the Function button.

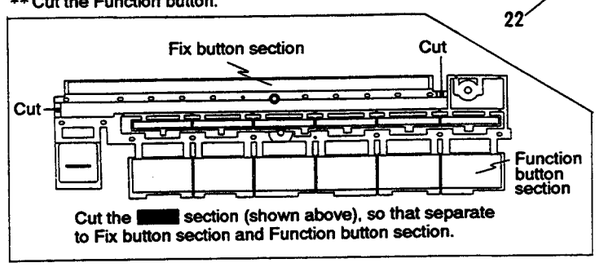
Fix button section
Cut
Cut
Function button section
Cut the ■ section (shown above), so that separate to Fix button section and Function button section.

3.2 MULTI MECHANISM ASSY

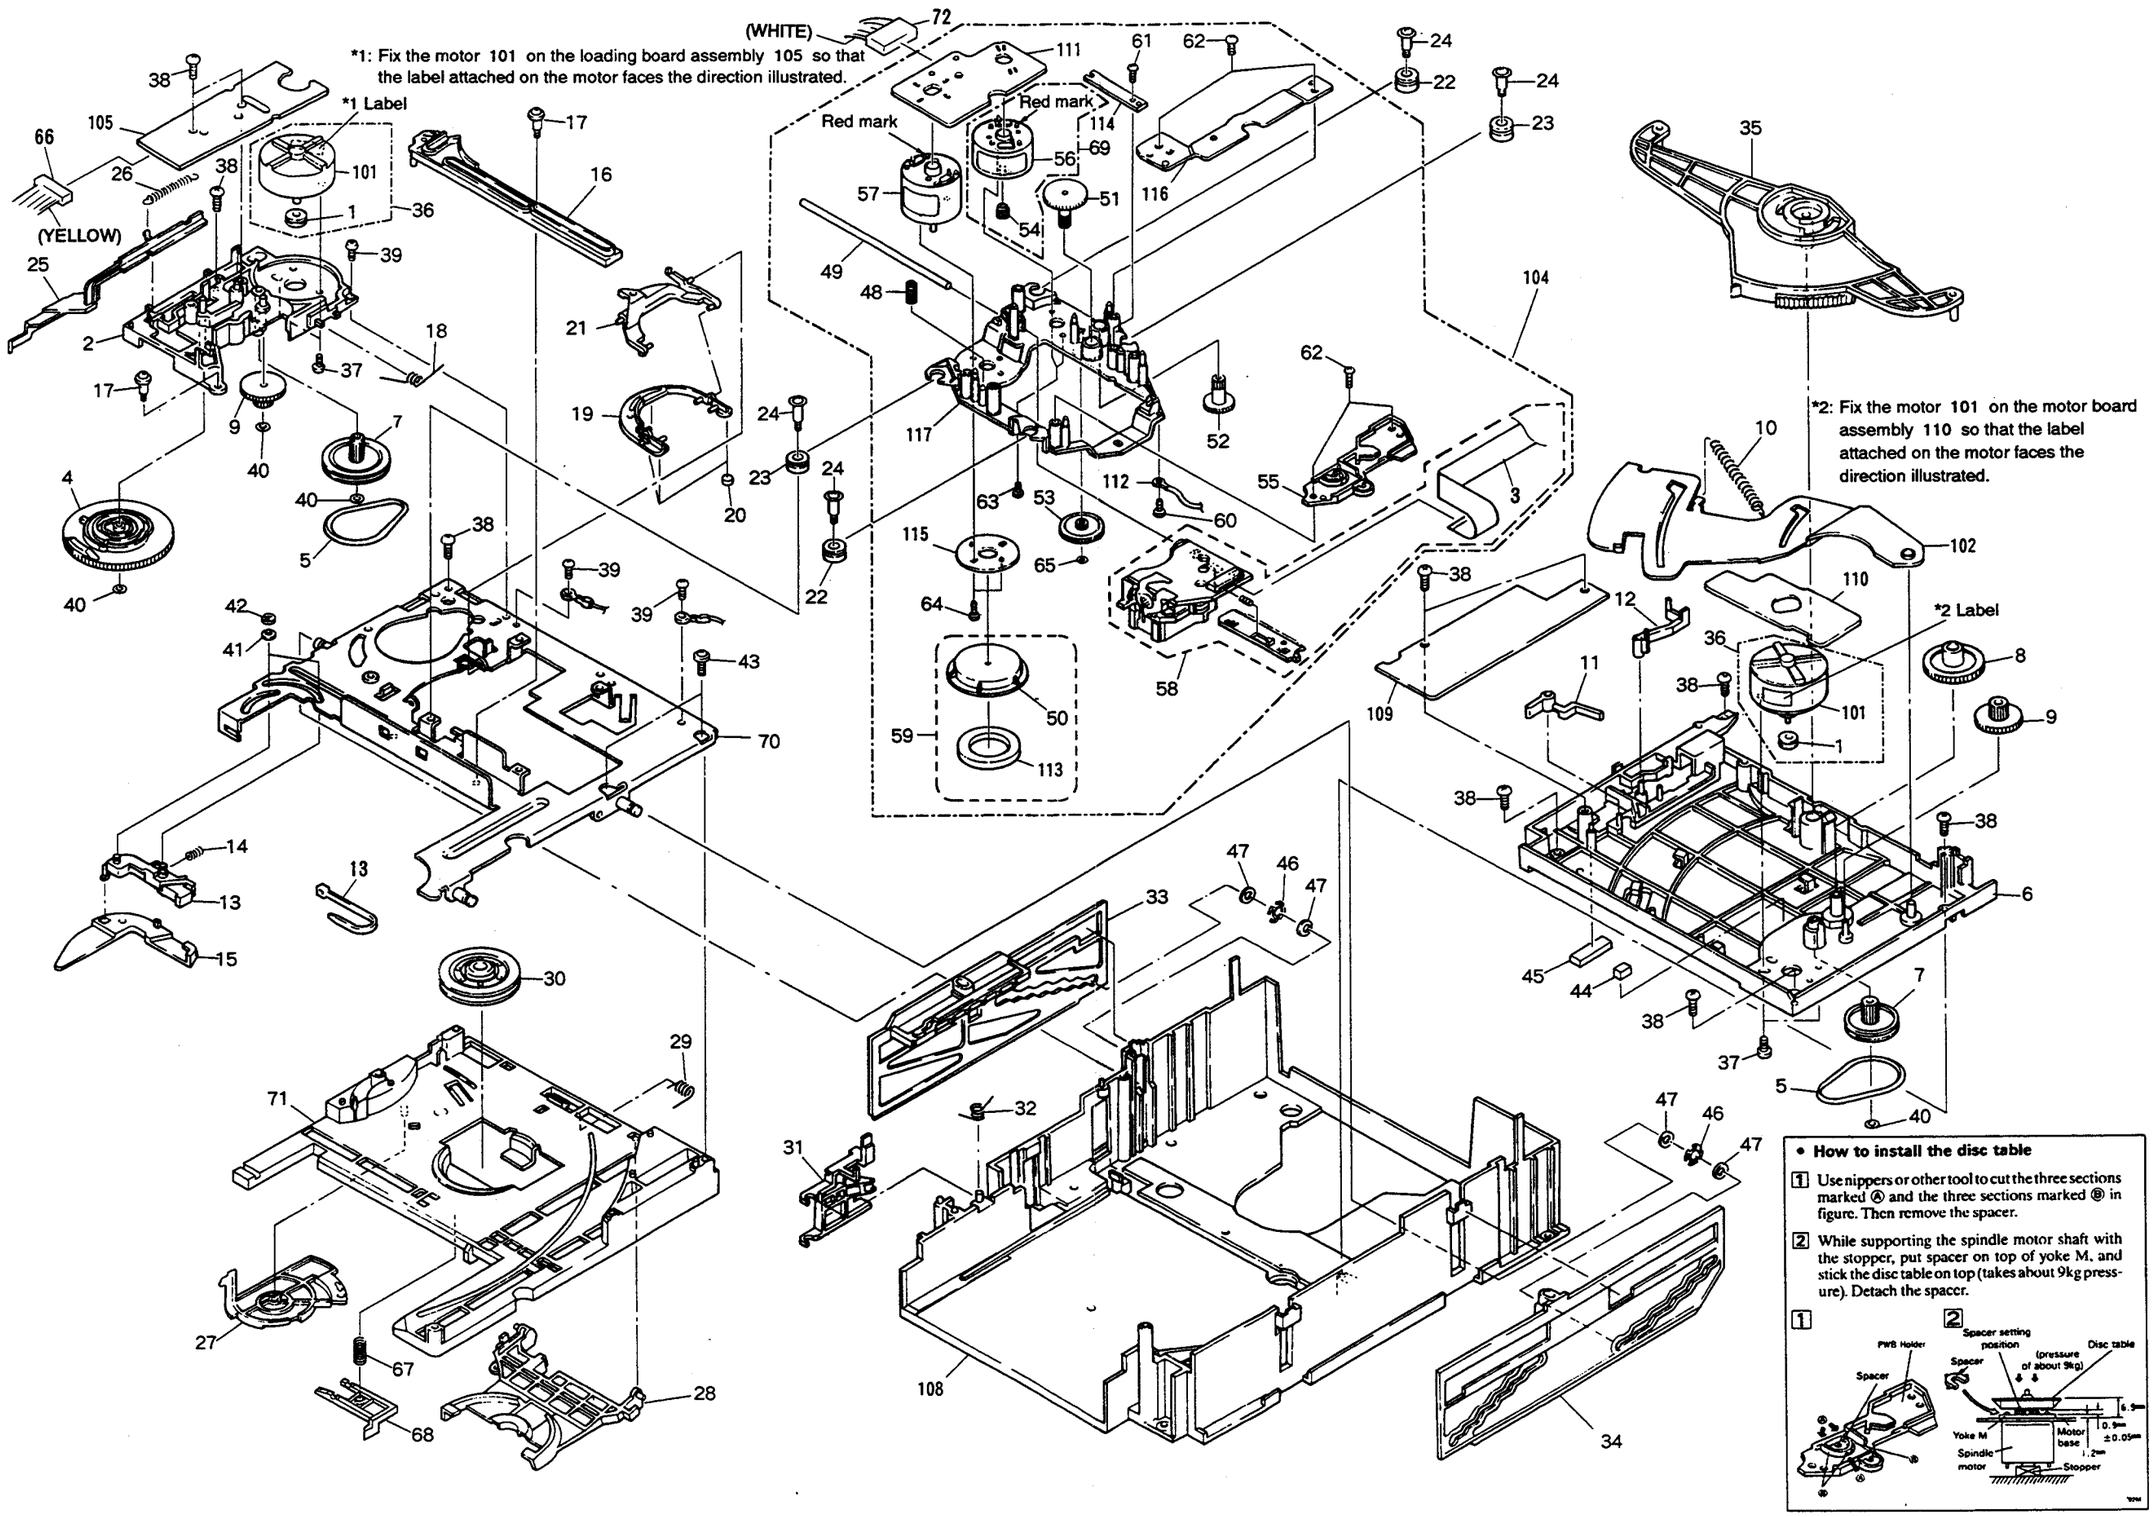
*1: Fix the motor 101 on the loading board assembly 105 so that the label attached on the motor faces the direction illustrated.
*1 Label
(WHITE)
(YELLOW)
Red mark
Red mark
*2: Fix the motor 101 on the motor board assembly 110 so that the label attached on the motor faces the direction illustrated.
*2 Label
• How to install the disc table
1 Use nippers or other tool to cut the three sections marked Ⓐ and the three sections marked Ⓑ in figure. Then remove the spacer.
2 While supporting the spindle motor shaft with the stopper, put spacer on top of yoke M, and stick the disc table on top (takes about 9kg pressure). Detach the spacer.
Spacer setting position
(pressure of about 9kg)
PWB Holder
Spacer
Disc table
Yoke M
Motor base
Spindle motor
Stopper
6.9
0.9 ±0.05
1.2

Parts List

Mark	No.	Description	Part No.
	1	Motor Pulley	PNW1634
	2	Gear Holder	PNW1929
	3	PU Frexible Cable	PNP1343
	4	Cam Gear	PNW1923
	5	Belt	PEB1138
	6	Top Guide N	PNW2441
	7	Gear Pulley	PNW1918
	8	Gear S	PNW1919
	9	Gear L	PNW1920
	10	Eject Spring	PBH1107
	11	Switch Lever	PNW1927
	12	Seven Bar	PNW1931
	13	Sub Rotary Lever	PNW1933
	14	Sub Rotary Lever Spring	PBH1111
	15	Rotary Lever	PNW1932
	16	Drive Plate	PNW1930
	17	Motor Screw	PBA-112
	18	Holder Lever Spring	PBH1110
	19	Disc Holder	PNW1924
	20	Cushion A	PED1001
	21	Holder Lever	PNW1925
	22	Float Rubber	PEB1014
	23	Float Rubber	PEB1132
	24	Float Screw	PBA1073
	25	Release Lever	PNW1934
	26	Release Spring	PBH1106
	27	Clamper Cam	PNW1922
	28	Clamper Holder	PNW1921
	29	Clamper Spring	PBH1109
	30	Clamper	PNW1857
	31	Lock Lever	PNW1917
	32	Lock Spring	PBH1108
	33	Stair NL	PNW2443
	34	Stair NR	PNW2444
	35	Synchronize Lever	PNW1926
	36	Motor Assy (LOADING, DISC SELECT)	PEA1130
	37	Screw	PMZ26P040FMC
	38	Screw	PPZ30P080FMC
	39	Screw	BBZ30P060FMC
	40	Washer	WT26D047D025
	41	Washer	WA31D054D025
	42	E ring	Z39-010
	43	Screw	IPZ30P080FMC
	44	Rubber Spacer	PEB1238
	45	Rubber Spacer	PEB1179
	46	Silent Ring	PBK1093
	47	Washer	WA62D130D025
	48	Earth Spring	PBH1132
	49	Guide Bar	PLA1094
	50	Disc Table	PNW1067
	51	Gear 1	PNW2052
	52	Gear 2	PNW2053
	53	Gear 3	PNW2054
	54	Pinion Gear	PNW2055
	55	PWB Holder	PNW2057
NSP	56	Carriage DC Motor / 0.3W	PXM1027
	57	D.C. Motor Assy (spindle, with oil)	PEA1235
	58	Pickup Assy	PEA1179
	59	Disc Table Assy	PEA1035
	60	Screw	BBZ26P060FMC
	61	Screw	BPZ20P060FMC
	62	Screw	BPZ26P100FMC
	63	Screw	JFZ17P025FZK
	64	Screw	JFZ20P040FMC
	65	Washer	WT12D032D025
	66	2mm Pitch Connector Assy 4P	PDE1241
	67	Stopper Spring	PBH1131
	68	Stopper	PNW2069
	69	D.C. Motor Assy (CARRIAGE)	PEA1246
	70	Upper Chassis	PNB1267
	71	Sub Chassis N	PNW2440
	72	2mm Pitch Connector Assy 4P	PDE1240
	73	Binder	REC - 371
NSP	101	Motor	VXM1033
NSP	102	Eject Lever	PNB1306
	103	• • • • •	
NSP	104	Servo Mechanism Assy M	PXA1417
NSP	105	Loading Board Assy	PWZ2038
	106	• • • • •	
	107	• • • • •	
NSP	108	Main Chassis	PNW2074
NSP	109	Select Board Assy	PWZ2533
NSP	110	Motor Board Assy	PWZ2040
NSP	111	Mechanism Board Assy	PWX1192
NSP	112	Earth Lead Unit	PDF1074
NSP	113	Clamp Magnet	PMF1014
NSP	114	Gear Stopper	PNB1303
NSP	115	Yoke M	PNB1312
NSP	116	AV Angle	PNB1405
	117	Carriage Base	PNW1445

4. FL INFORMATION

■ PEL1084 (V701)

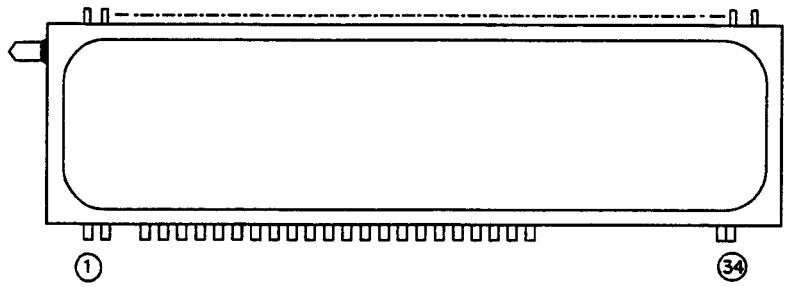

PIN CONNECTION

TERMINAL NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
ELECTRODE	F1	F1	NP	P (e)	P (f)	P (g)	P (h)	P (a)	P (b)	P (c)	P (d)	P (i)	P (j)	P (k)	P (l)	NC	9G	8G	
TERMINAL NO.				19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
ELECTRODE				7G	6G	5G	4G	3G	2G	1G	NX	NX	NX	NX	NX	NX	NP	NX	F2

Notes F: Filament NP: No Pin
G: Grid NC: No Connection
P: Anode **NX: No Extend pin**

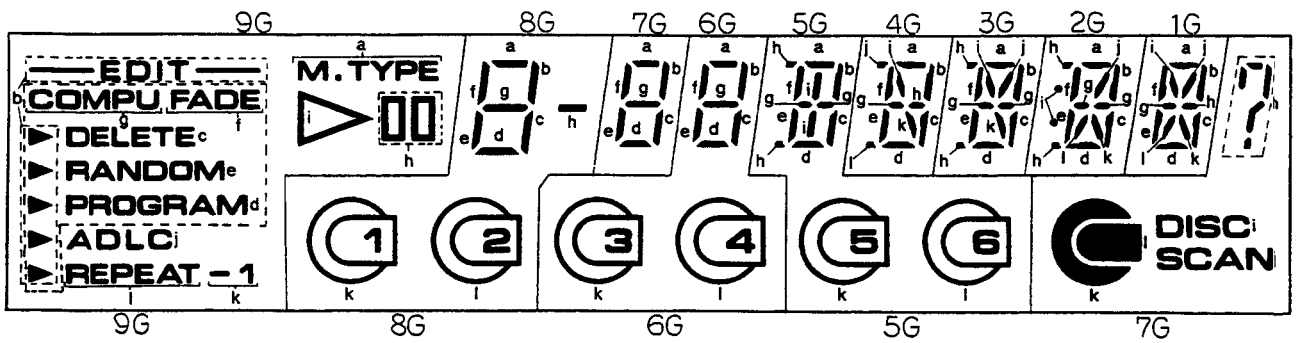

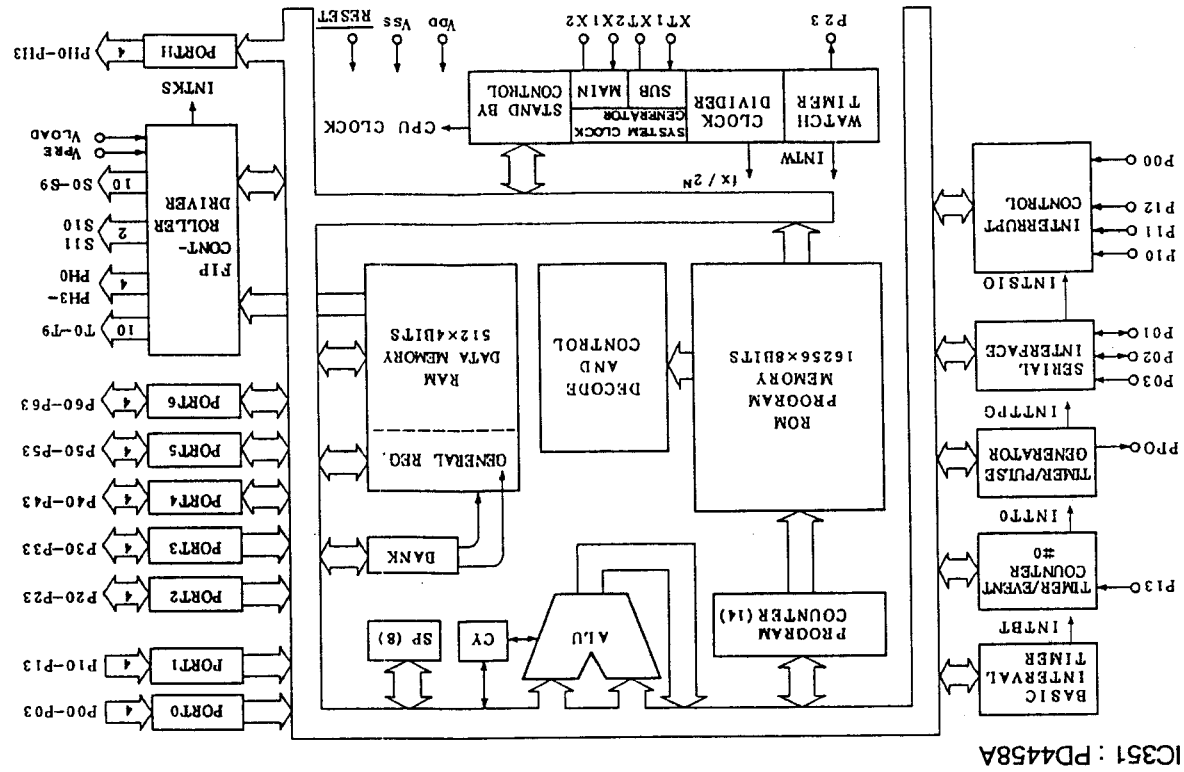

● Pin Function
(IC351 : PD4458A)
System control IC

No.	Pin Name	Function
1	RESET	Reset input.
2-11	T0-T9	Digit output.
12-15	PH3-PH0	Port H.
16,17	S11,S10	Segment output.
18	VLOAD	Power supply terminal for FIP driver.
19	VPRE	Power supply terminal for FIP driver.
20-25	S9-S4	Segment output.
26	VDD	+ Power supply terminal.
27-30	S3-S0	Segment output.
31-34	P00-P03	Port 0.
35-38	P10-P13	Port 1.
39-42	P20-P23	Port 2.
43-46	P30-P33	Port 3.
47-50	P60-P63	Port 6.
51-54	P40-P43	Port 4.
55	PPO	Pulse output.
56,57	X1,X2	Clock oscillation terminal of Main system.
58	Vss	Ground
59,60	XT1,XT2	Clock oscillation terminal of Sub system.
61-64	P50-P53	Port 5.

5. SCHEMATIC DIAGRAM

5.1 Waveforms

Note: The encircled numbers denote measuring points in the schematic diagram.

*1 50T-JUMP:After switching to the pause mode, press the manual search key.
*2 FOCUS-IN:Press the key without loading a disc.

② TP1-Pin 1:PLAY MODE (RF)
500mV/div 500nsec/div
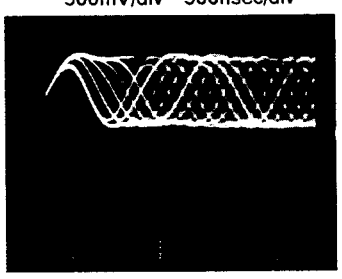

⑤ IC202-Pin 3 :FOCUS-IN (*2) MODE (FODR)
1V/div 200msec/div
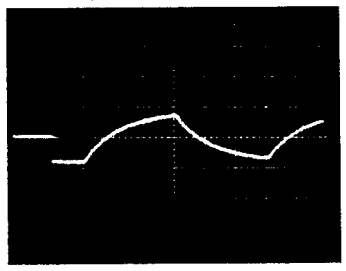

⑦ IC201-Pin 9:TRACK SEARCH MODE (SPDR)
2V/div 50msec/div
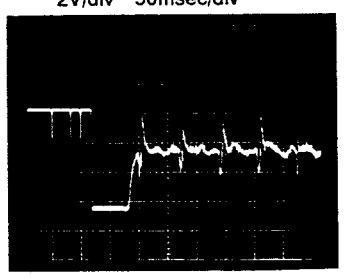

⑪ IC401-Pin 10:PLAY MODE (1kHz) (LO) (D/A DATA OUT)
1V/div 200 μ sec/div
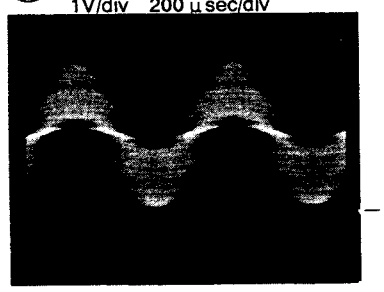

㉒
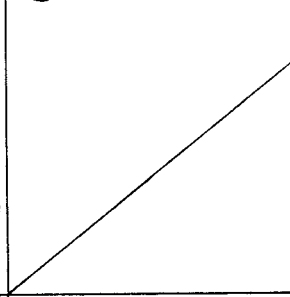

② TP1-Pin 1:TRACK SEARCH MODE (RF)
500mV/div 200 μ sec/div
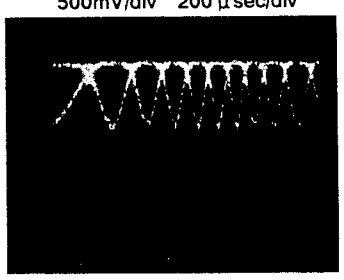

⑤ IC202-Pin 3 :PLAY MODE (FODR)
1V/div 1msec/div
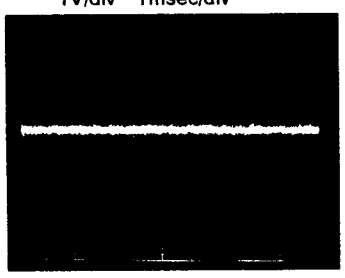

⑧ IC202-Pin 9 :PLAY MODE (CADR)
1V/div 2sec/div
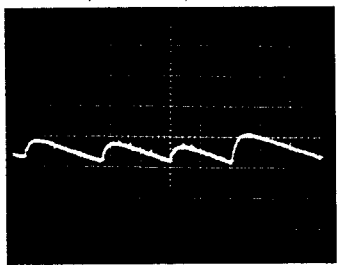

⑯ IC301-Pin 35:PLAY MODE (1kHz) (BCLK)
2V/div 500nsec/div
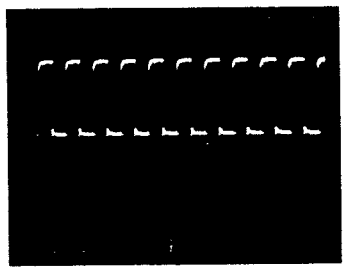

㉒
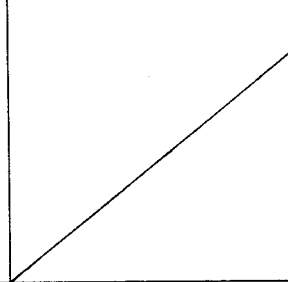

③ TP1-Pin 6:PLAY MODE (FOER)
100mV/div 10msec/div
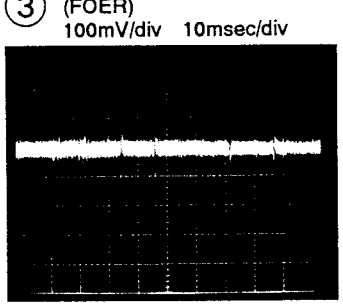

⑥ IC202-Pin 4:PLAY MODE (TRDR)
500mV/div 1msec/div
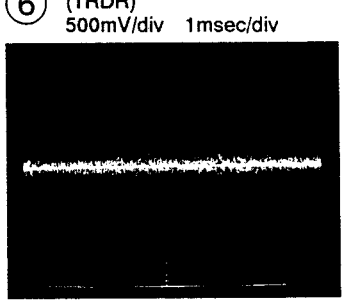

⑧ IC202-Pin 9 :TRACK SEARCH MODE (CADR)
2V/div 200msec/div
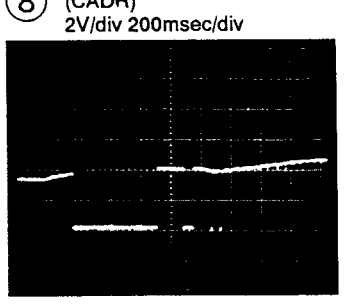

⑱ IC301-Pin 32:PLAY MODE (1kHz) (LRCK)
2V/div 10 μ sec/div
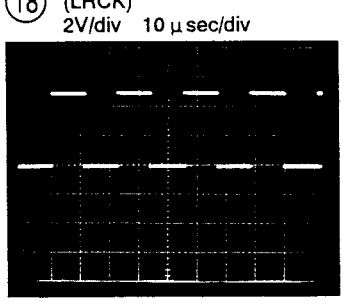

㉓ :TRACK SEARCH
Upper:TP1-Pin 1 (RF
Lower: IC151-Pin 29
2V/div 200
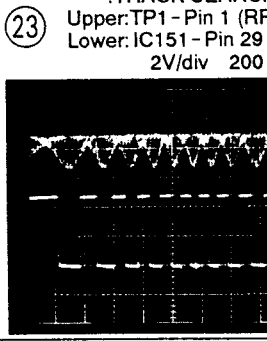

④ TP1-Pin 2:PLAY MODE (TRER)
1V/div 10msec/div
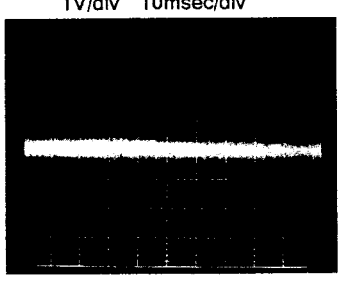

⑥ IC202-Pin 4:50T-JUMP (*1) MODE (TRDR)
500mV/div 1msec/div
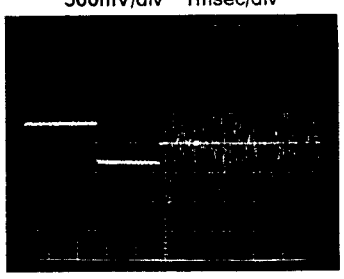

⑨ IC151-Pin 32:PLAY MODE (EFM)
2V/div 500nsec/div
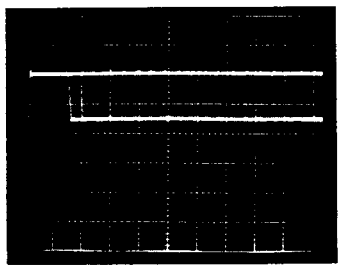

⑲ IC301-Pin 34:PLAY MODE (1kHz) (DATA)
2V/div 500nsec/div
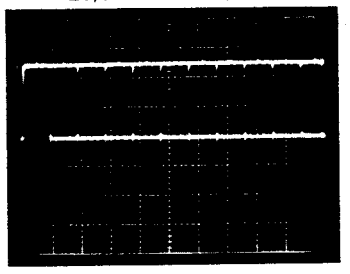

㉔ :PLAY M
Upper:TP1-Pin 1 (RF
Lower: IC151-Pin 30
5V/div 200
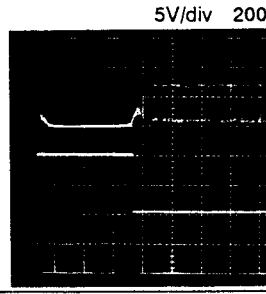

④ TP1-Pin 2:50T-JUMP (*1) MODE (TRER)
1V/div 1msec/div
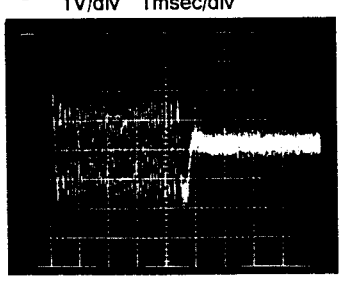

⑦ IC201-Pin 9:PLAY MODE (SPDR)
1V/div 50msec/div
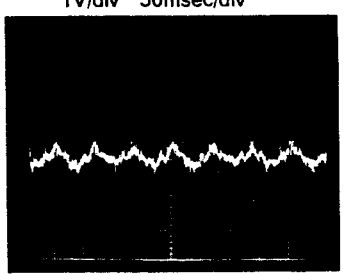

⑩ IC401-Pin 9:PLAY MODE (1kHz) ($\overline{LO}$) (D/A DATA OUT)
1V/div 200 μ sec/div
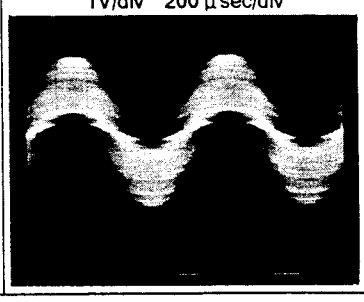

㉑ Pin-OUTPUT:PLAY MODE(1kHz)
1V/div 200 μ sec/div
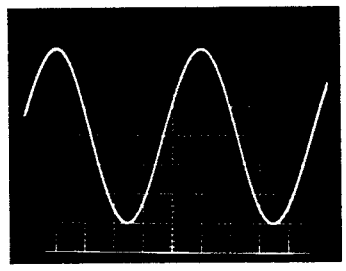

㉕
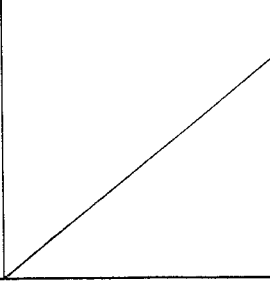

● IC BLOCK DIAGRAMS

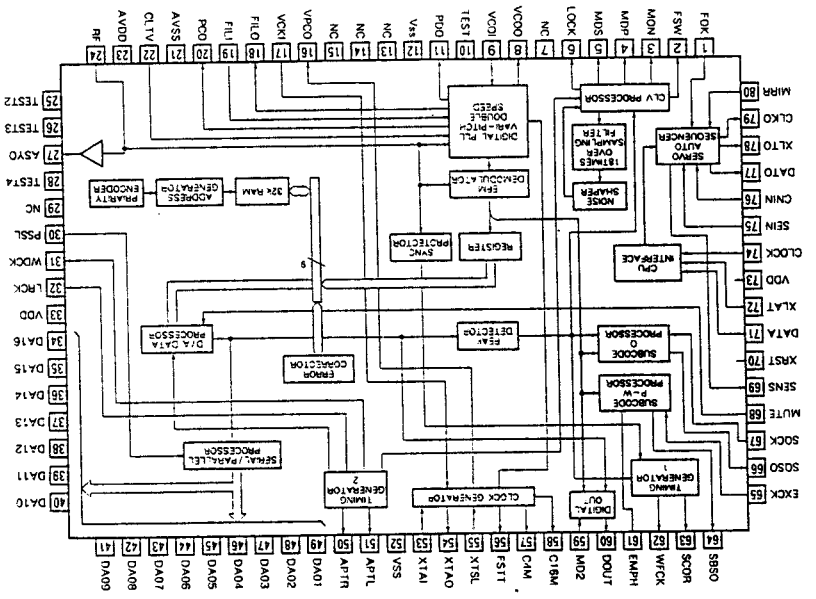

IC301 : CXD2500BQ

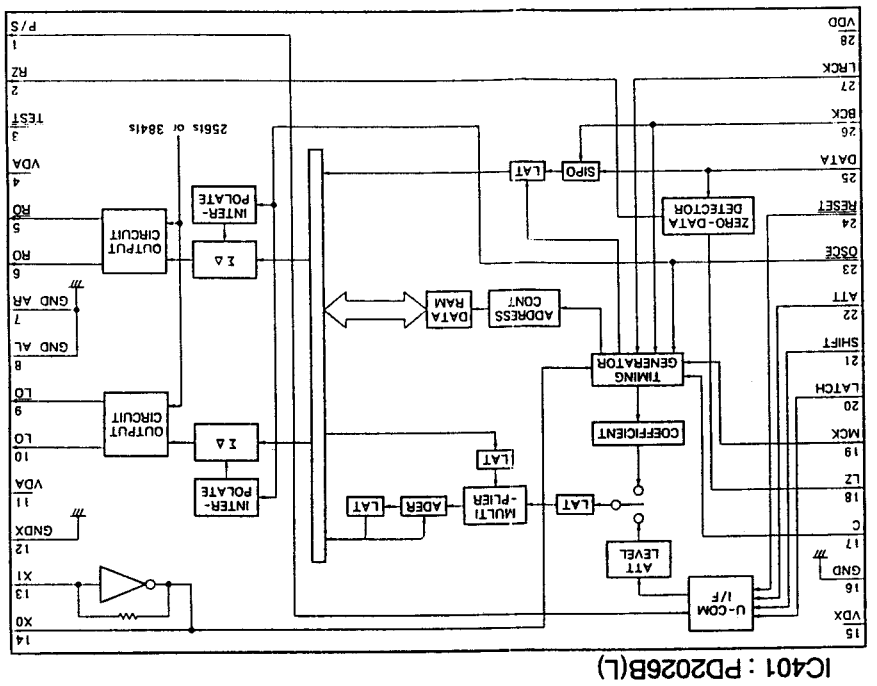

IC401 : PD2026B(L)

NOTE FOR SCHEMATIC DIAGRAMS (Type 4A)

1. **When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".**
2. **Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.**
3. **RESISTORS:**
   Unit: k:kΩ, M:MΩ, or Ω unless otherwise noted.
   Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.
   Tolerance: (F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% or ±5% unless otherwise noted.
4. **CAPACITORS:**
   Unit: p:pF or μF unless otherwise noted.
   Ratings: capacitor (μF)/ voltage (V) unless otherwise noted.
   Rated voltage: 50V except for electrolytic capacitors.
5. **COILS:**
   Unit: m:mH or μH unless otherwise noted.
6. **VOLTAGE AND CURRENT:**
   ▭ or ← V :
   DC voltage (V) in PLAY mode unless otherwise noted.
   ⇦ mA or ← mA :
   DC current in PLAY mode unless otherwise noted.
   Value in ( ) is DC current in STOP mode.
7. **OTHERS:**
   - ⊘ or ⊘ : Adjusting point.
   - ◁ : Measurement point.
   - The ⚠ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.
8. **SCH—□ ON THE SCHEMATIC DIAGRAM:**
   - SCH—□ indicates the drawing number of the schematic diagram. (SCH stands for schematic diagram.)
9. **SWITCHES** (Underline indicates switch position):

FUNCTION BOARD ASSY
S702 : EJECT ▲
S703 : DISC 2
S704 : DISC 1
S705 : AUTO FADER
S706 : DELETE
S708 : PROGRAM
S709 : 1
S710 : 2
S711 : 3
S712 : 4
S713 : 5
S714 : 6
S715 : 7
S716 : 8
S717 : 9
S718 : 10
S719 : >10
S721 : COMPU TIME FADE
S722 : HI – LITE
S723 : DISC 3
S724 : DISC 4
S725 : ADLC
S726 : MUSIC TYPE
S727 : DISC 5
S728 : DISC 6
S729 : PAUSE ❚❚
S730 : REPEAT
S731 : STOP ■
S732 : TIME
S733 : PLAY ▶
S734 : RANDOM
S735 : |◀◀ ◀◀
S736 : ▶▶ ▶▶|
SWITCH BOARD ASSY
S801 : POWER
LOADING BOARD ASSY
S601 : LPS1
S602 : LPS2

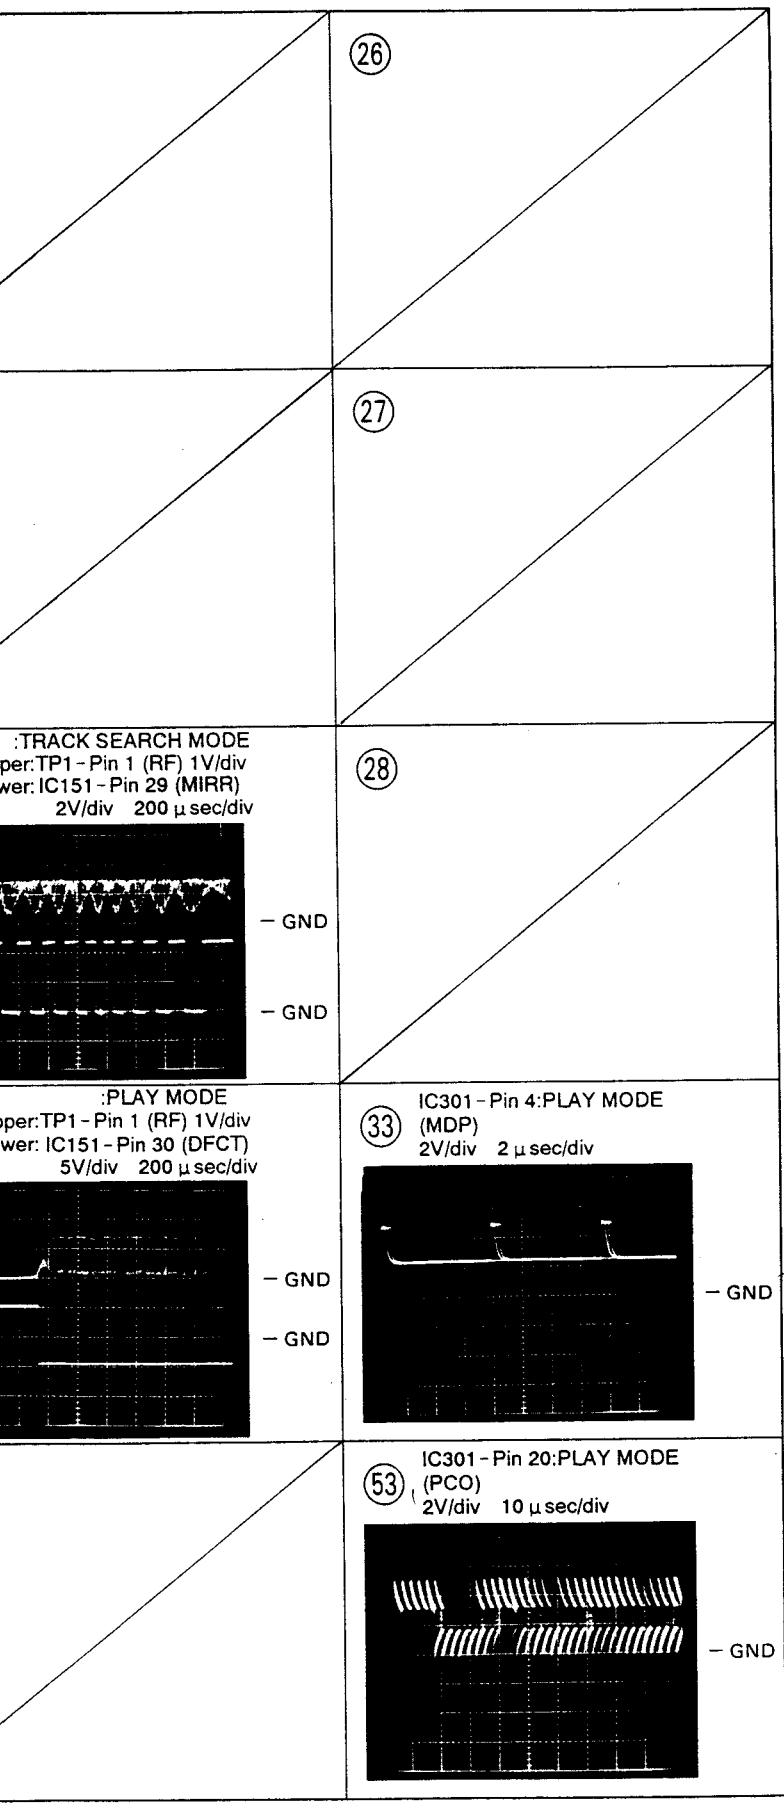

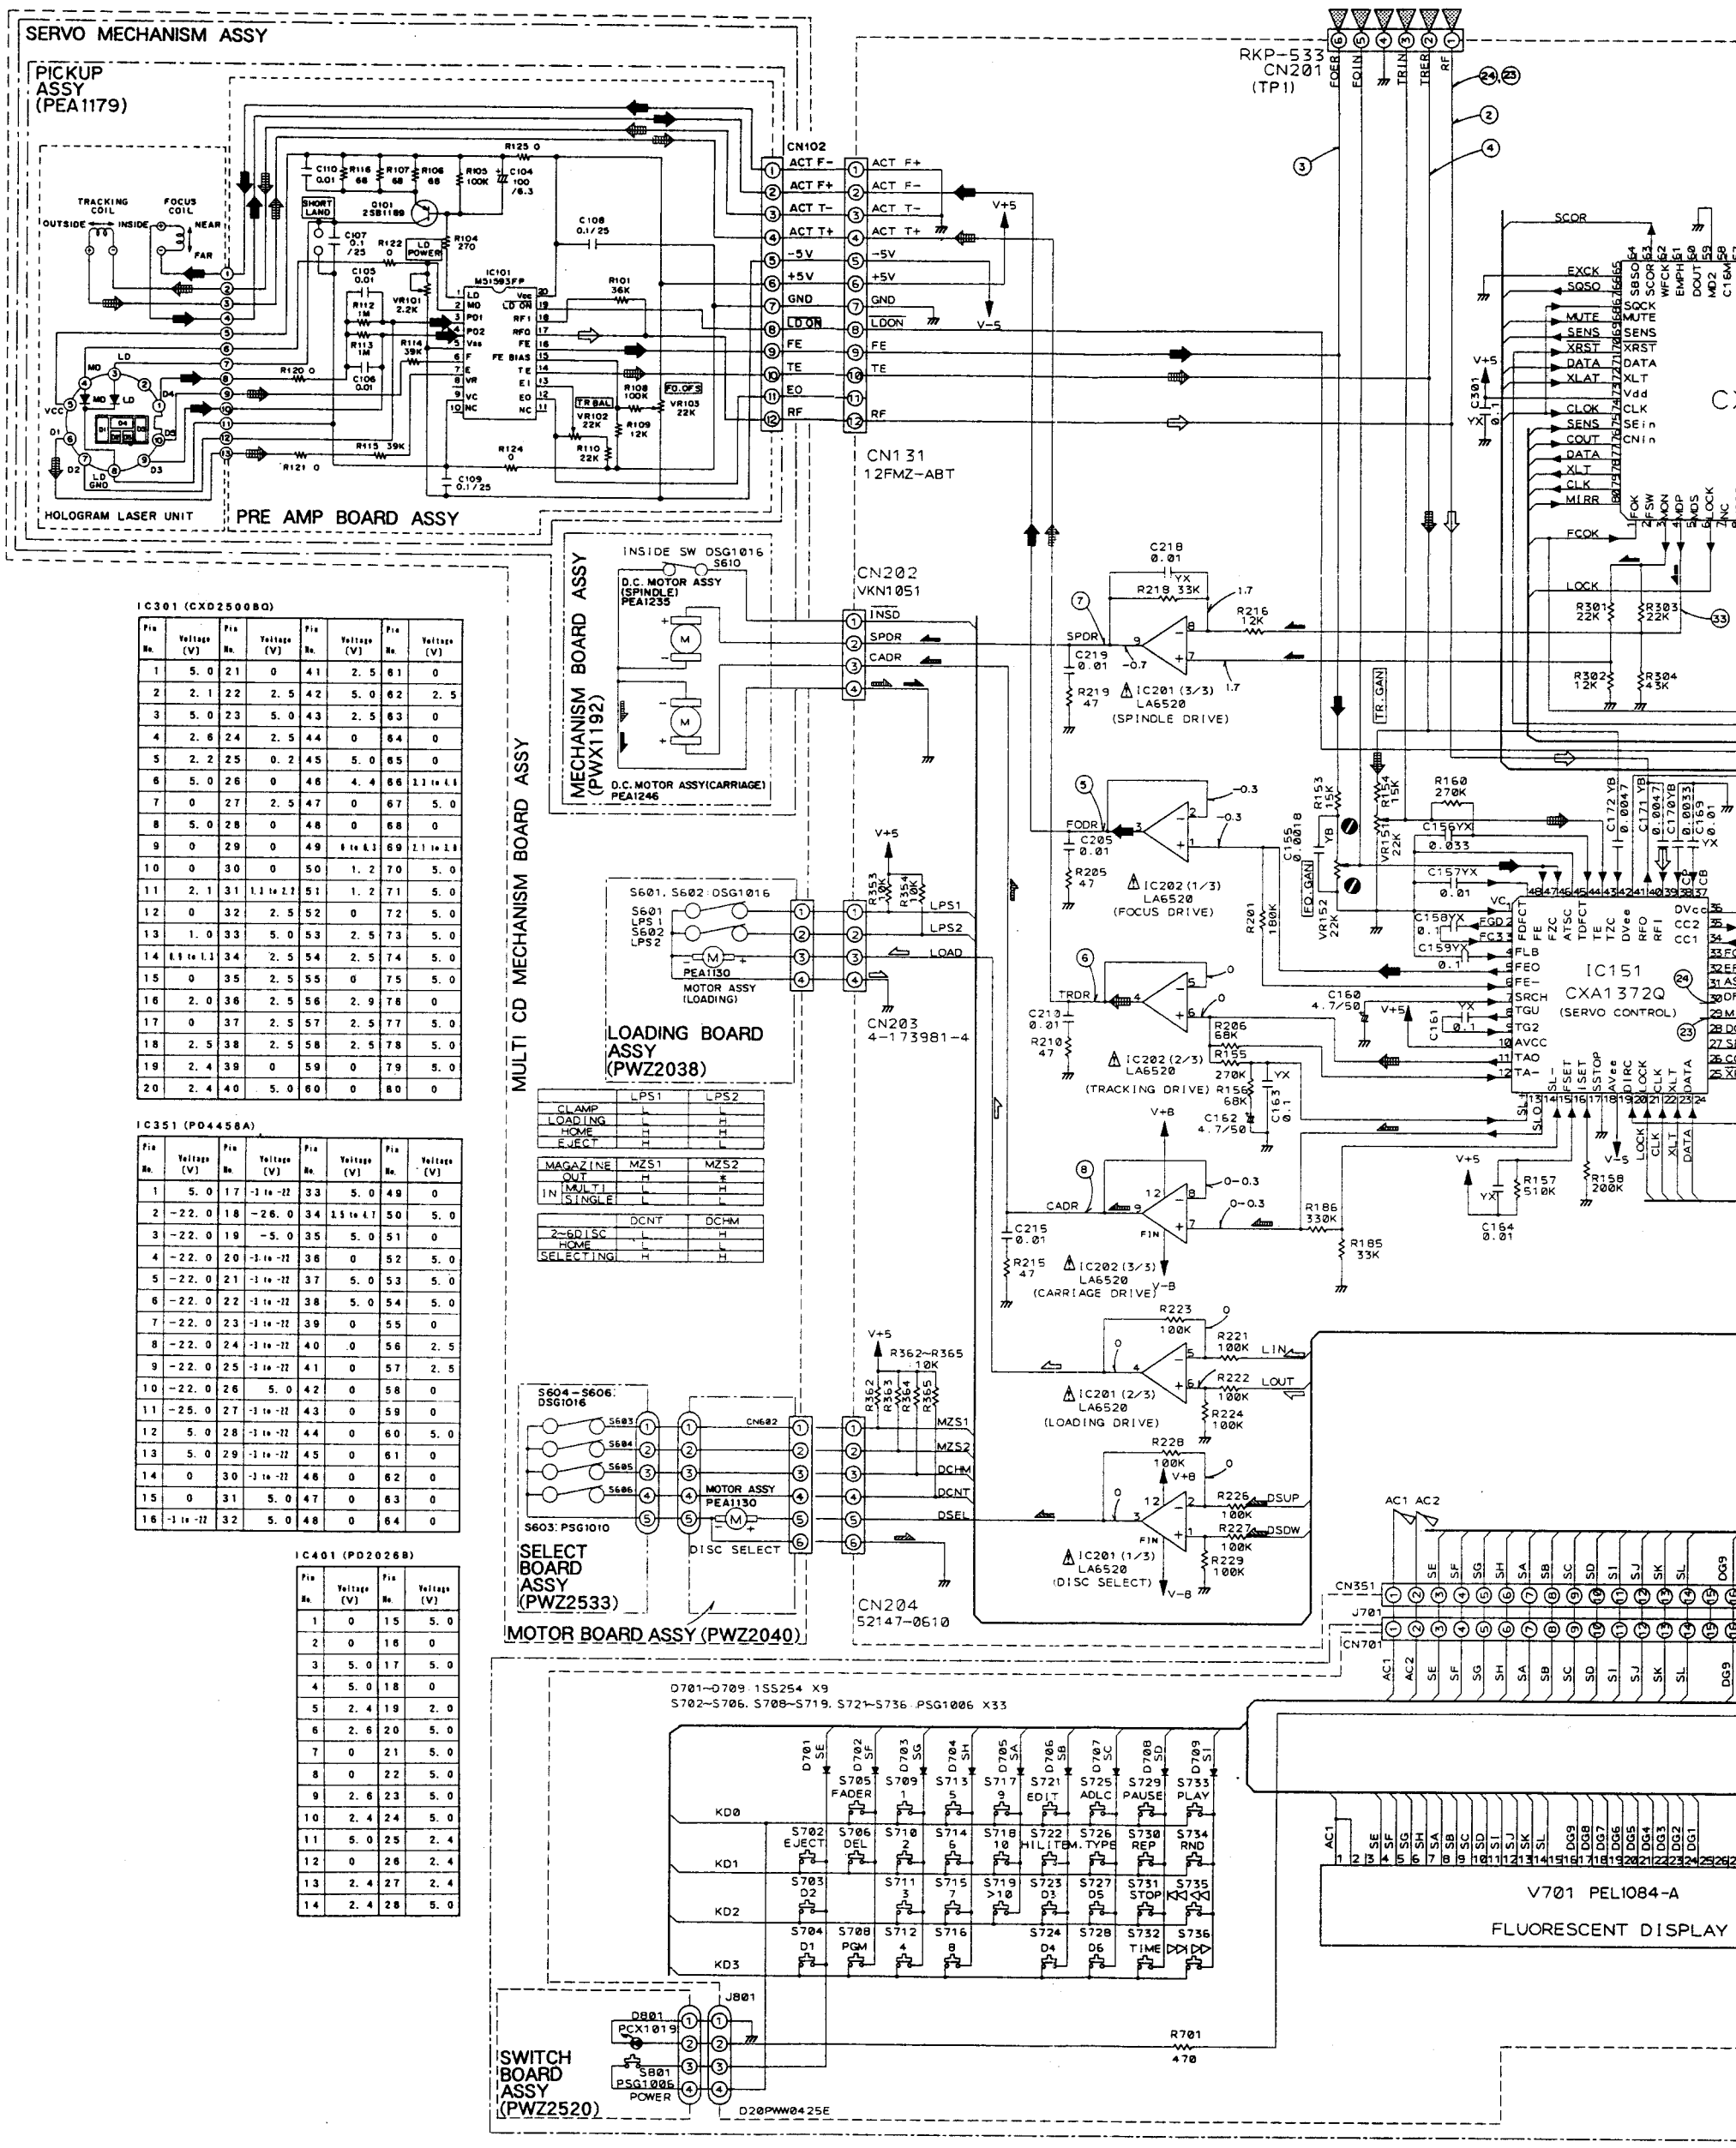

IC301 (CXD2500BQ)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	5.0	21	0	41	2.5	61	0
2	2.1	22	2.5	42	5.0	62	2.5
3	5.0	23	5.0	43	2.5	63	0
4	2.6	24	2.5	44	0	64	0
5	2.2	25	0.2	45	5.0	65	0
6	5.0	26	0	46	4.4	66	1.1 to 1.1
7	0	27	2.5	47	0	67	5.0
8	5.0	28	0	48	0	68	0
9	0	29	0	49	0 to 0.3	69	2.1 to 2.8
10	0	30	0	50	1.2	70	5.0
11	2.1	31	1.1 to 2.1	51	1.2	71	5.0
12	0	32	2.5	52	0	72	5.0
13	1.0	33	5.0	53	2.5	73	5.0
14	0.9 to 1.1	34	2.5	54	2.5	74	5.0
15	0	35	2.5	55	0	75	5.0
16	2.0	36	2.5	56	2.9	76	0
17	0	37	2.5	57	2.5	77	5.0
18	2.5	38	2.5	58	2.5	78	5.0
19	2.4	39	0	59	0	79	5.0
20	2.4	40	5.0	60	0	80	0

IC351 (PD4458A)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	5.0	17	-1 to -2.2	33	5.0	49	0
2	-22.0	18	-26.0	34	2.5 to 4.7	50	5.0
3	-22.0	19	-5.0	35	5.0	51	0
4	-22.0	20	-1 to -2.2	36	0	52	5.0
5	-22.0	21	-1 to -2.2	37	5.0	53	5.0
6	-22.0	22	-1 to -2.2	38	5.0	54	5.0
7	-22.0	23	-1 to -2.2	39	0	55	0
8	-22.0	24	-1 to -2.2	40	0	56	2.5
9	-22.0	25	-1 to -2.2	41	0	57	2.5
10	-22.0	26	5.0	42	0	58	0
11	-25.0	27	-1 to -2.2	43	0	59	0
12	5.0	28	-1 to -2.2	44	0	60	5.0
13	5.0	29	-1 to -2.2	45	0	61	0
14	0	30	-1 to -2.2	46	0	62	0
15	0	31	5.0	47	0	63	0
16	-1 to -2.2	32	5.0	48	0	64	0

IC401 (PD2026B)

Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0	15	5.0
2	0	16	0
3	5.0	17	5.0
4	5.0	18	0
5	2.4	19	2.0
6	2.6	20	5.0
7	0	21	5.0
8	0	22	5.0
9	2.6	23	5.0
10	2.4	24	5.0
11	5.0	25	2.4
12	0	26	2.4
13	2.4	27	2.4
14	2.4	28	5.0

	LPS1	LPS2
CLAMP	L	L
LOADING	L	H
HOME	H	H
EJECT	H	L

	MZS1	MZS2
MAGAZINE OUT	H	*
MAGAZINE IN MULTI	L	H
MAGAZINE IN SINGLE	L	L

	DCNT	DCHM
2~6DISC	L	H
HOME	L	L
SELECTING	H	H

RKP-533
CN201
(TP1)

CN102

CN131
12FMZ-ABT

CN202
VKN1051

CN203
4-173981-4

CN204
52147-0610

TP2

⚠ MOTHER BOARD ASSY
(PWM1866)

IC301
CXD2500BQ
(DECODER)

IC151
CXA1372Q
(SERVO CONTROL)

IC351
PD4458A
(SYSTEM CONTROL)

PD20268 C401 (L)
D/A CONVERTER

Q322
INVERTER BUFFER

⚠IC201 (3/3)
LA6520
(SPINDLE DRIVE)

⚠IC202 (1/3)
LA6520
(FOCUS DRIVE)

⚠IC202 (2/3)
LA6520
(TRACKING DRIVE)

⚠IC202 (3/3)
LA6520
(CARRIAGE DRIVE)

⚠IC201 (2/3)
LA6520
(LOADING DRIVE)

⚠IC201 (1/3)
LA6520
(DISC SELECT)

INSIDE SW DSG1016
S610

D.C. MOTOR ASSY
(SPINDLE)
PEA1235

D.C. MOTOR ASSY(CARRIAGE)
PEA1246

S601, S602 DSG1016

MOTOR ASSY
(LOADING)
PEA1130

LOADING BOARD
ASSY
(PWZ2038)

	LPS1	LPS2
AMP	L	H
DING	L	H
OVE	H	H
ECT	H	L

	MZS1	MZS2
AZINE	H	L
IT	L	*
ULTI	L	H
INGLE	L	L

	DCNT	DCHM
DISC	L	H
OVE	L	L
CTING	H	H

S606
16

MOTOR ASSY
PEA1130

DISC SELECT

D701~D709 1SS254 X9
S702~S706, S708~S719, S721~S736 PSG1006 X33

V701 PEL1084-A
FLUORESCENT DISPLAY

REMOTE SENSOR
SBX1610-51

D801
PCX1019

S801
PSG1006
POWER

D20PWW0425E

FUNCTION BOARD ASSY
(PWZ2814)

SUB BOARD ASSY
(PWX1360)

MECHANISM BOARD ASSY
(PWX1192)

BOARD ASSY (PWZ2040)

3 4 5 6

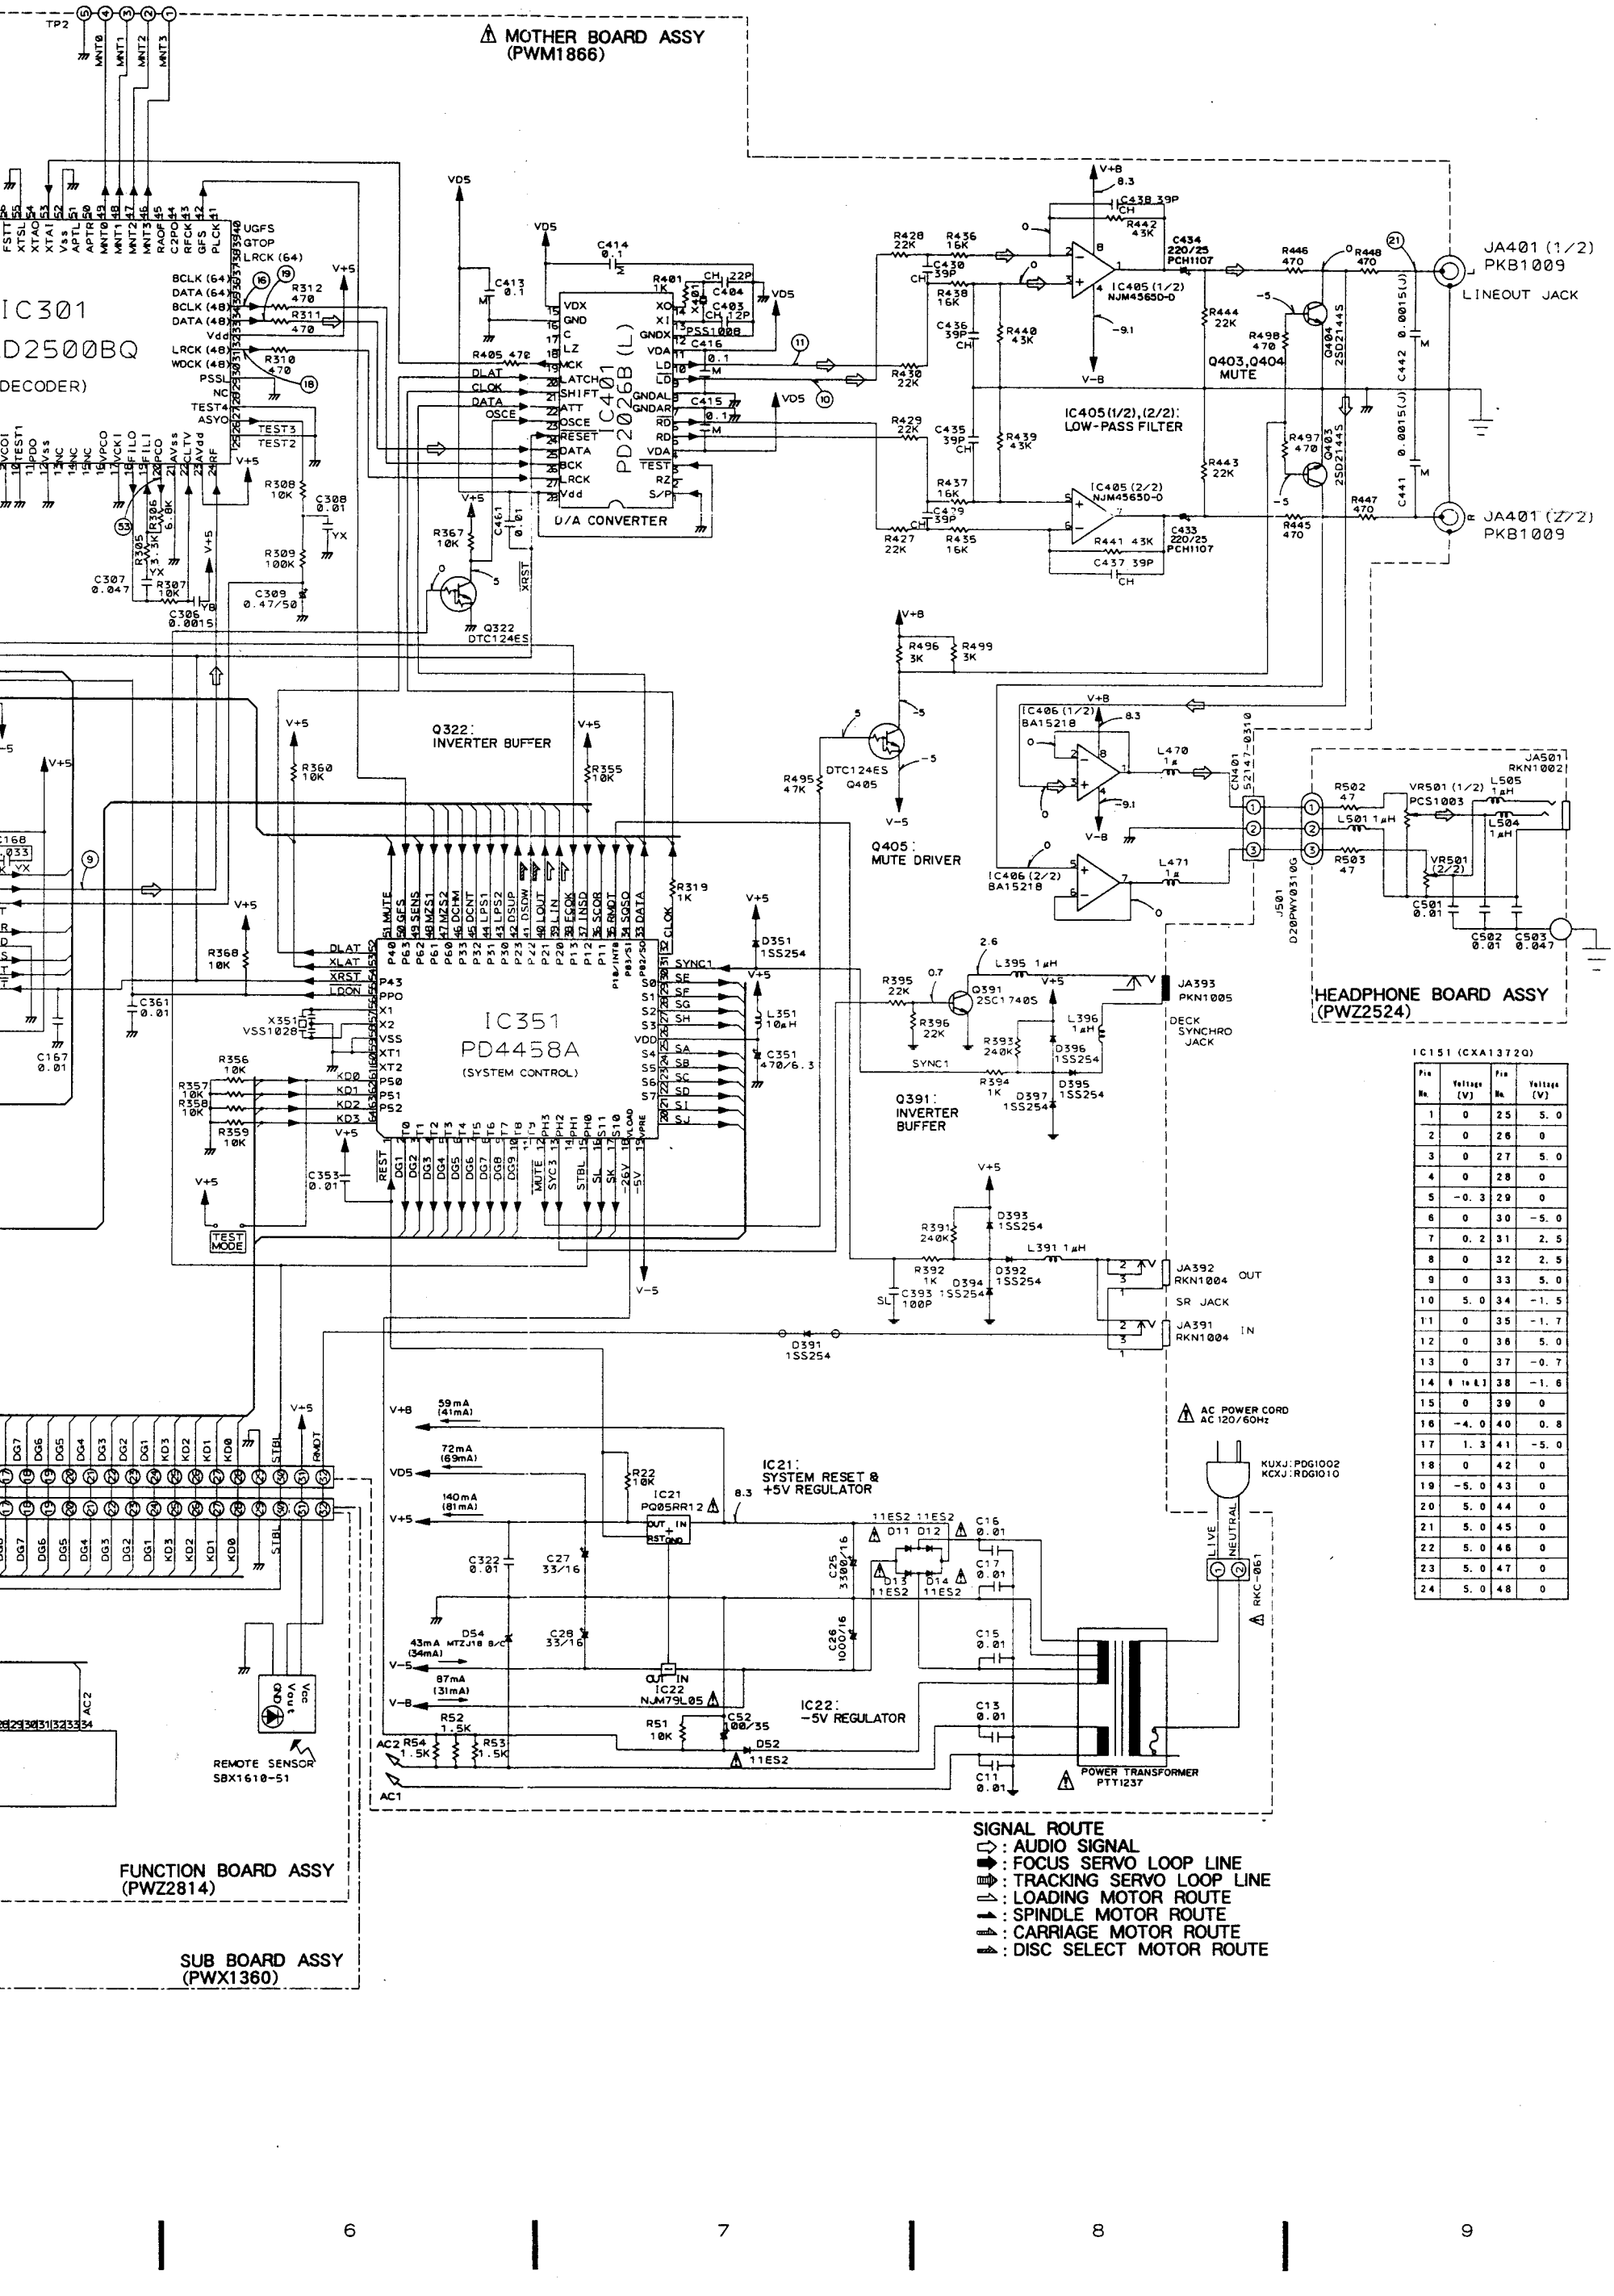

IC151 (CXA1372Q)

Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	0	25	5.0
2	0	26	0
3	0	27	5.0
4	0	28	0
5	-0.3	29	0
6	0	30	-5.0
7	0.2	31	2.5
8	0	32	2.5
9	0	33	5.0
10	5.0	34	-1.5
11	0	35	-1.7
12	0	36	5.0
13	0	37	-0.7
14	0 to 0.1	38	-1.6
15	0	39	0
16	-4.0	40	0.8
17	1.3	41	-5.0
18	0	42	0
19	-5.0	43	0
20	5.0	44	0
21	5.0	45	0
22	5.0	46	0
23	5.0	47	0
24	5.0	48	0

6. PCB CONNECTION DIAGRAM

- **This diagram is viewed from the mounted parts side.**

NOTE FOR PCB DIAGRAMS:

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
Q504 E C B Q504	Q504 Q504	Transistor
D203 D203	D203	Diode
C513 C513	C513	Capacitor (Polarized)

3. The transistor terminal marked with E or ⊏ shows the emitter.
4. The diode terminal marked with ⓓ or ⊐ shows cathode side.
5. The capacitor terminal marked with ⊖ or ⊏ shows negative terminal.

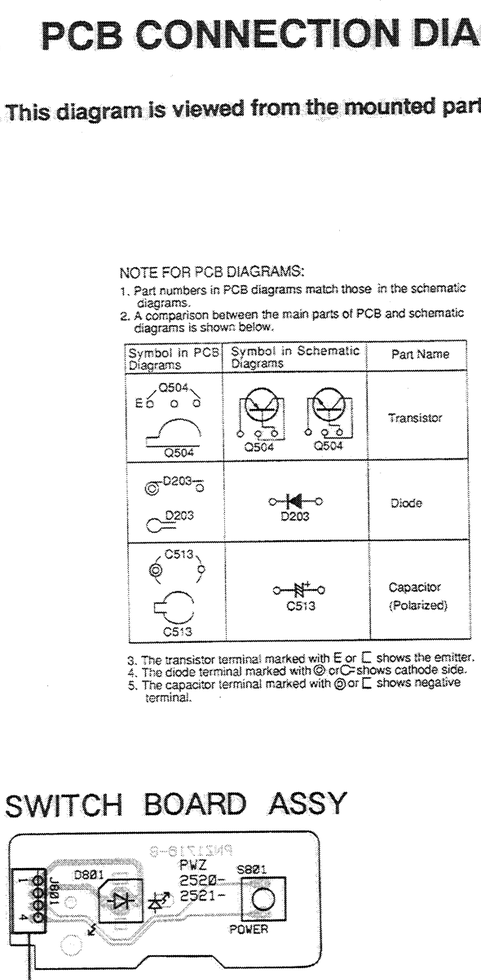

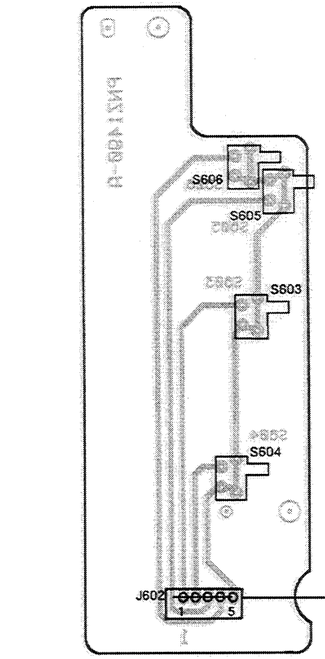

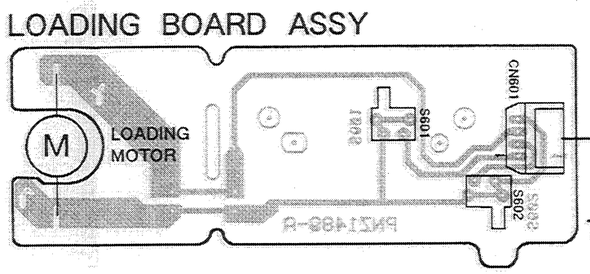

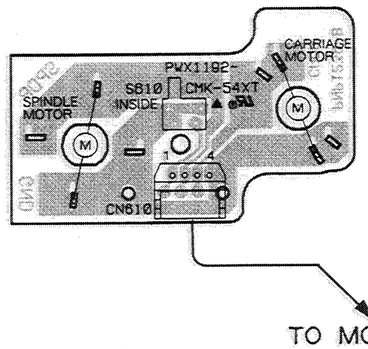

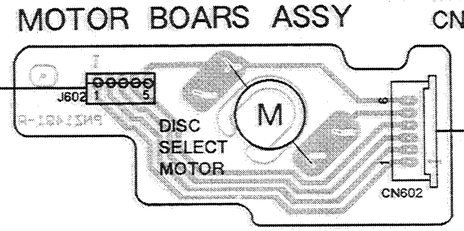

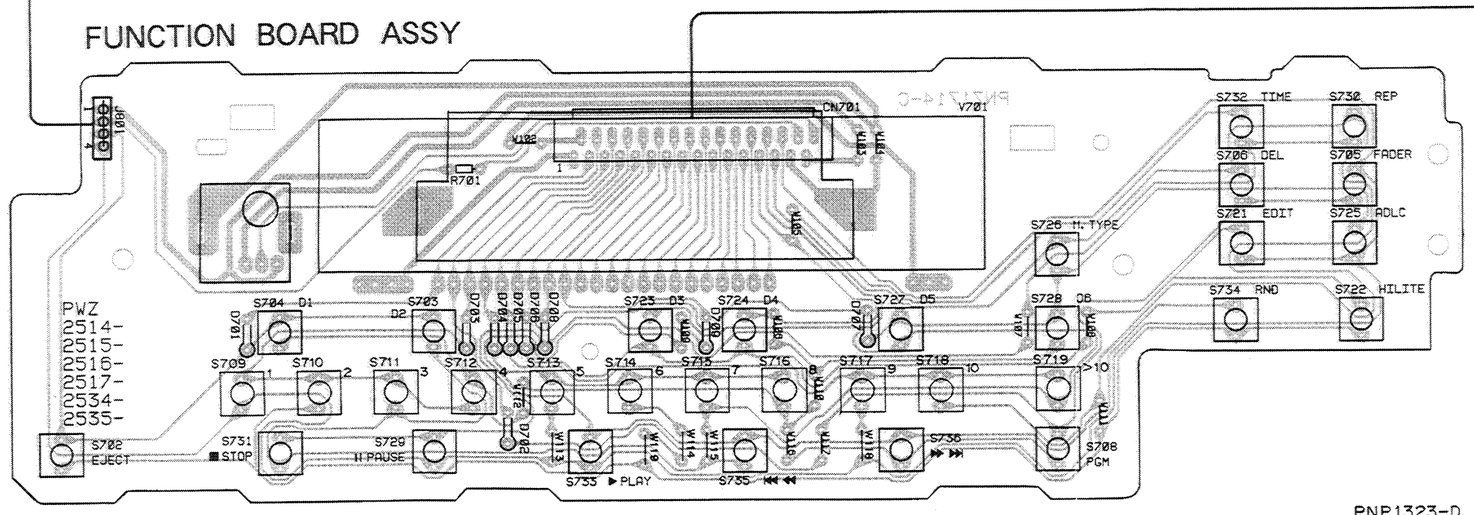

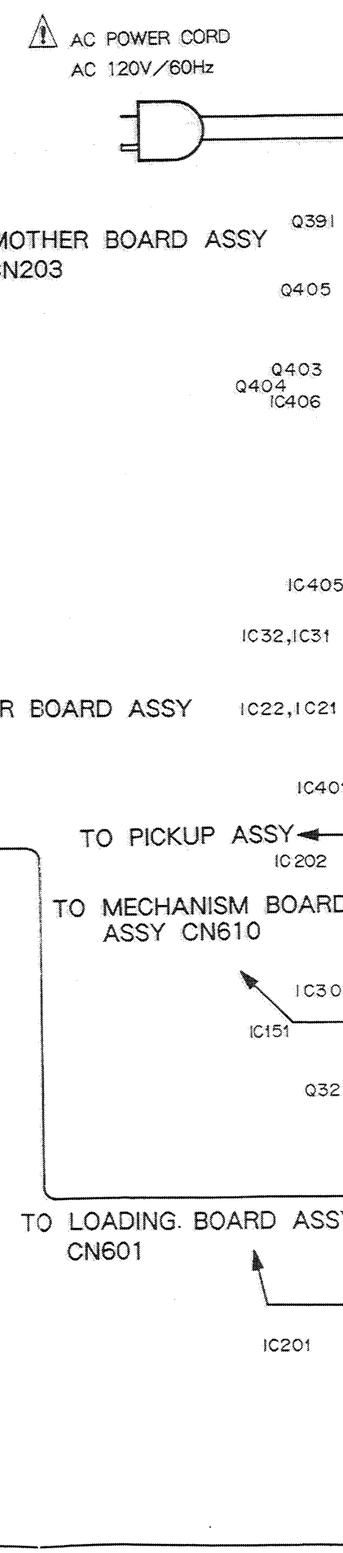

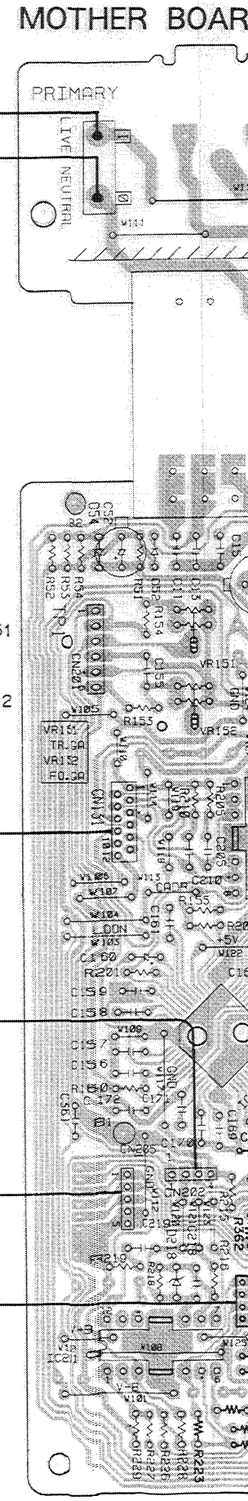

PNP1323-C

PNP1323-D

LOADING BOARD ASSY

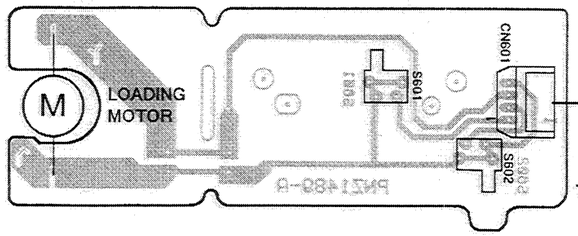

TO MOTHER BOARD ASSY CN203

MECHANISM BOARD ASSY

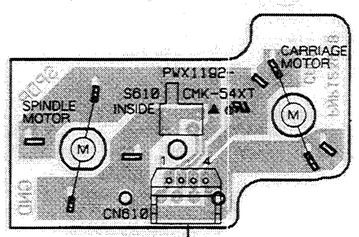

TO MOTHER BOARD ASSY CN202

MOTOR BOARS ASSY

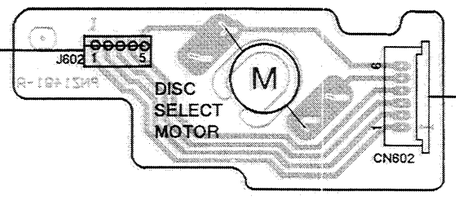

AC POWER CORD
AC 120V/60Hz

TO MOTHER BOARD ASSY CN203

TO PICKUP ASSY

TO MECHANISM BOARD ASSY CN610

TO LOADING BOARD ASSY CN601

MOTHER BOARDD ASSY

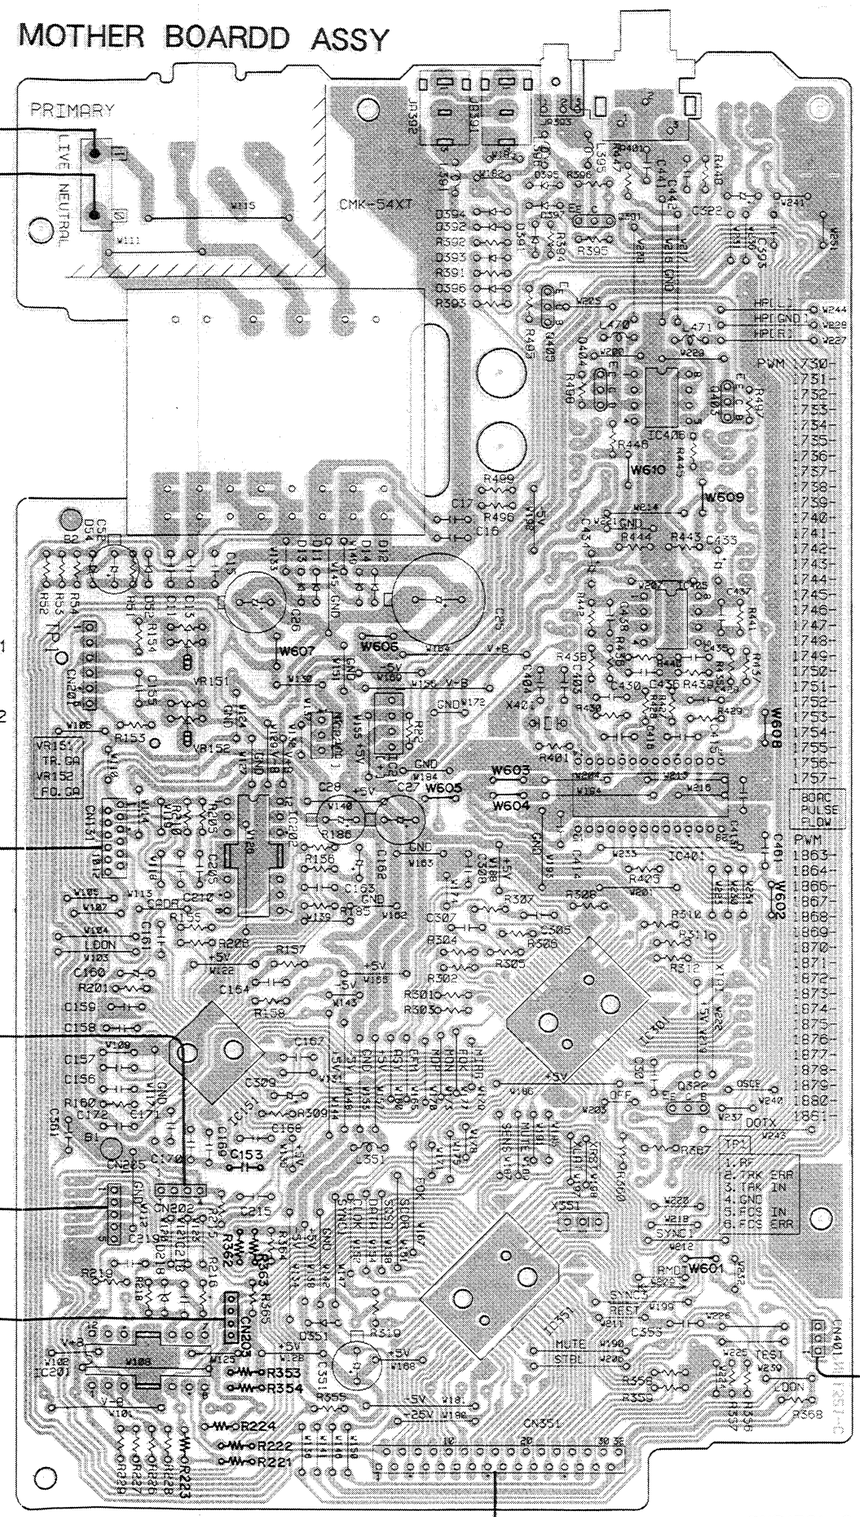

Q391
Q405
Q403
Q404
IC406
IC405
IC32,IC31
IC22,IC21
IC401
IC202
IC301
IC151
Q322
IC201

HEADPHONE BOARD ASSY

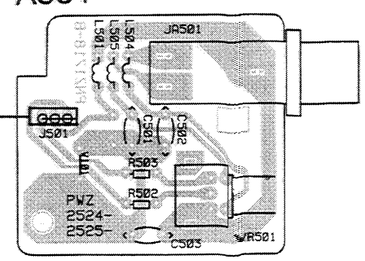

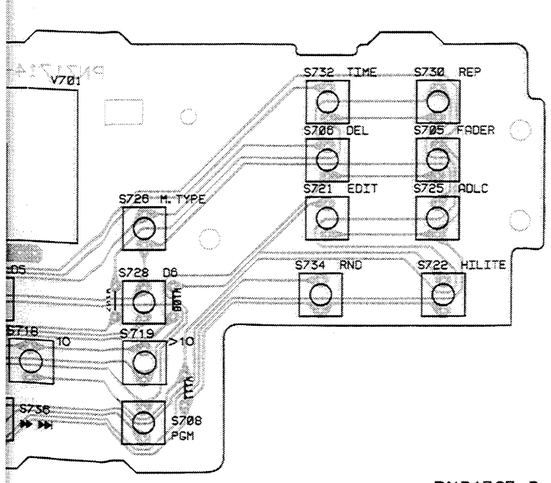

NOTE FOR PCB DIAGRAMS:

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
B C E	B C E B C E	Transistor
B C E	B C E B C E	Transistor with resistor
D G S	D G S D G S	Field effect transistor
		Resistor array
	IN OUT	3- terminal regulator

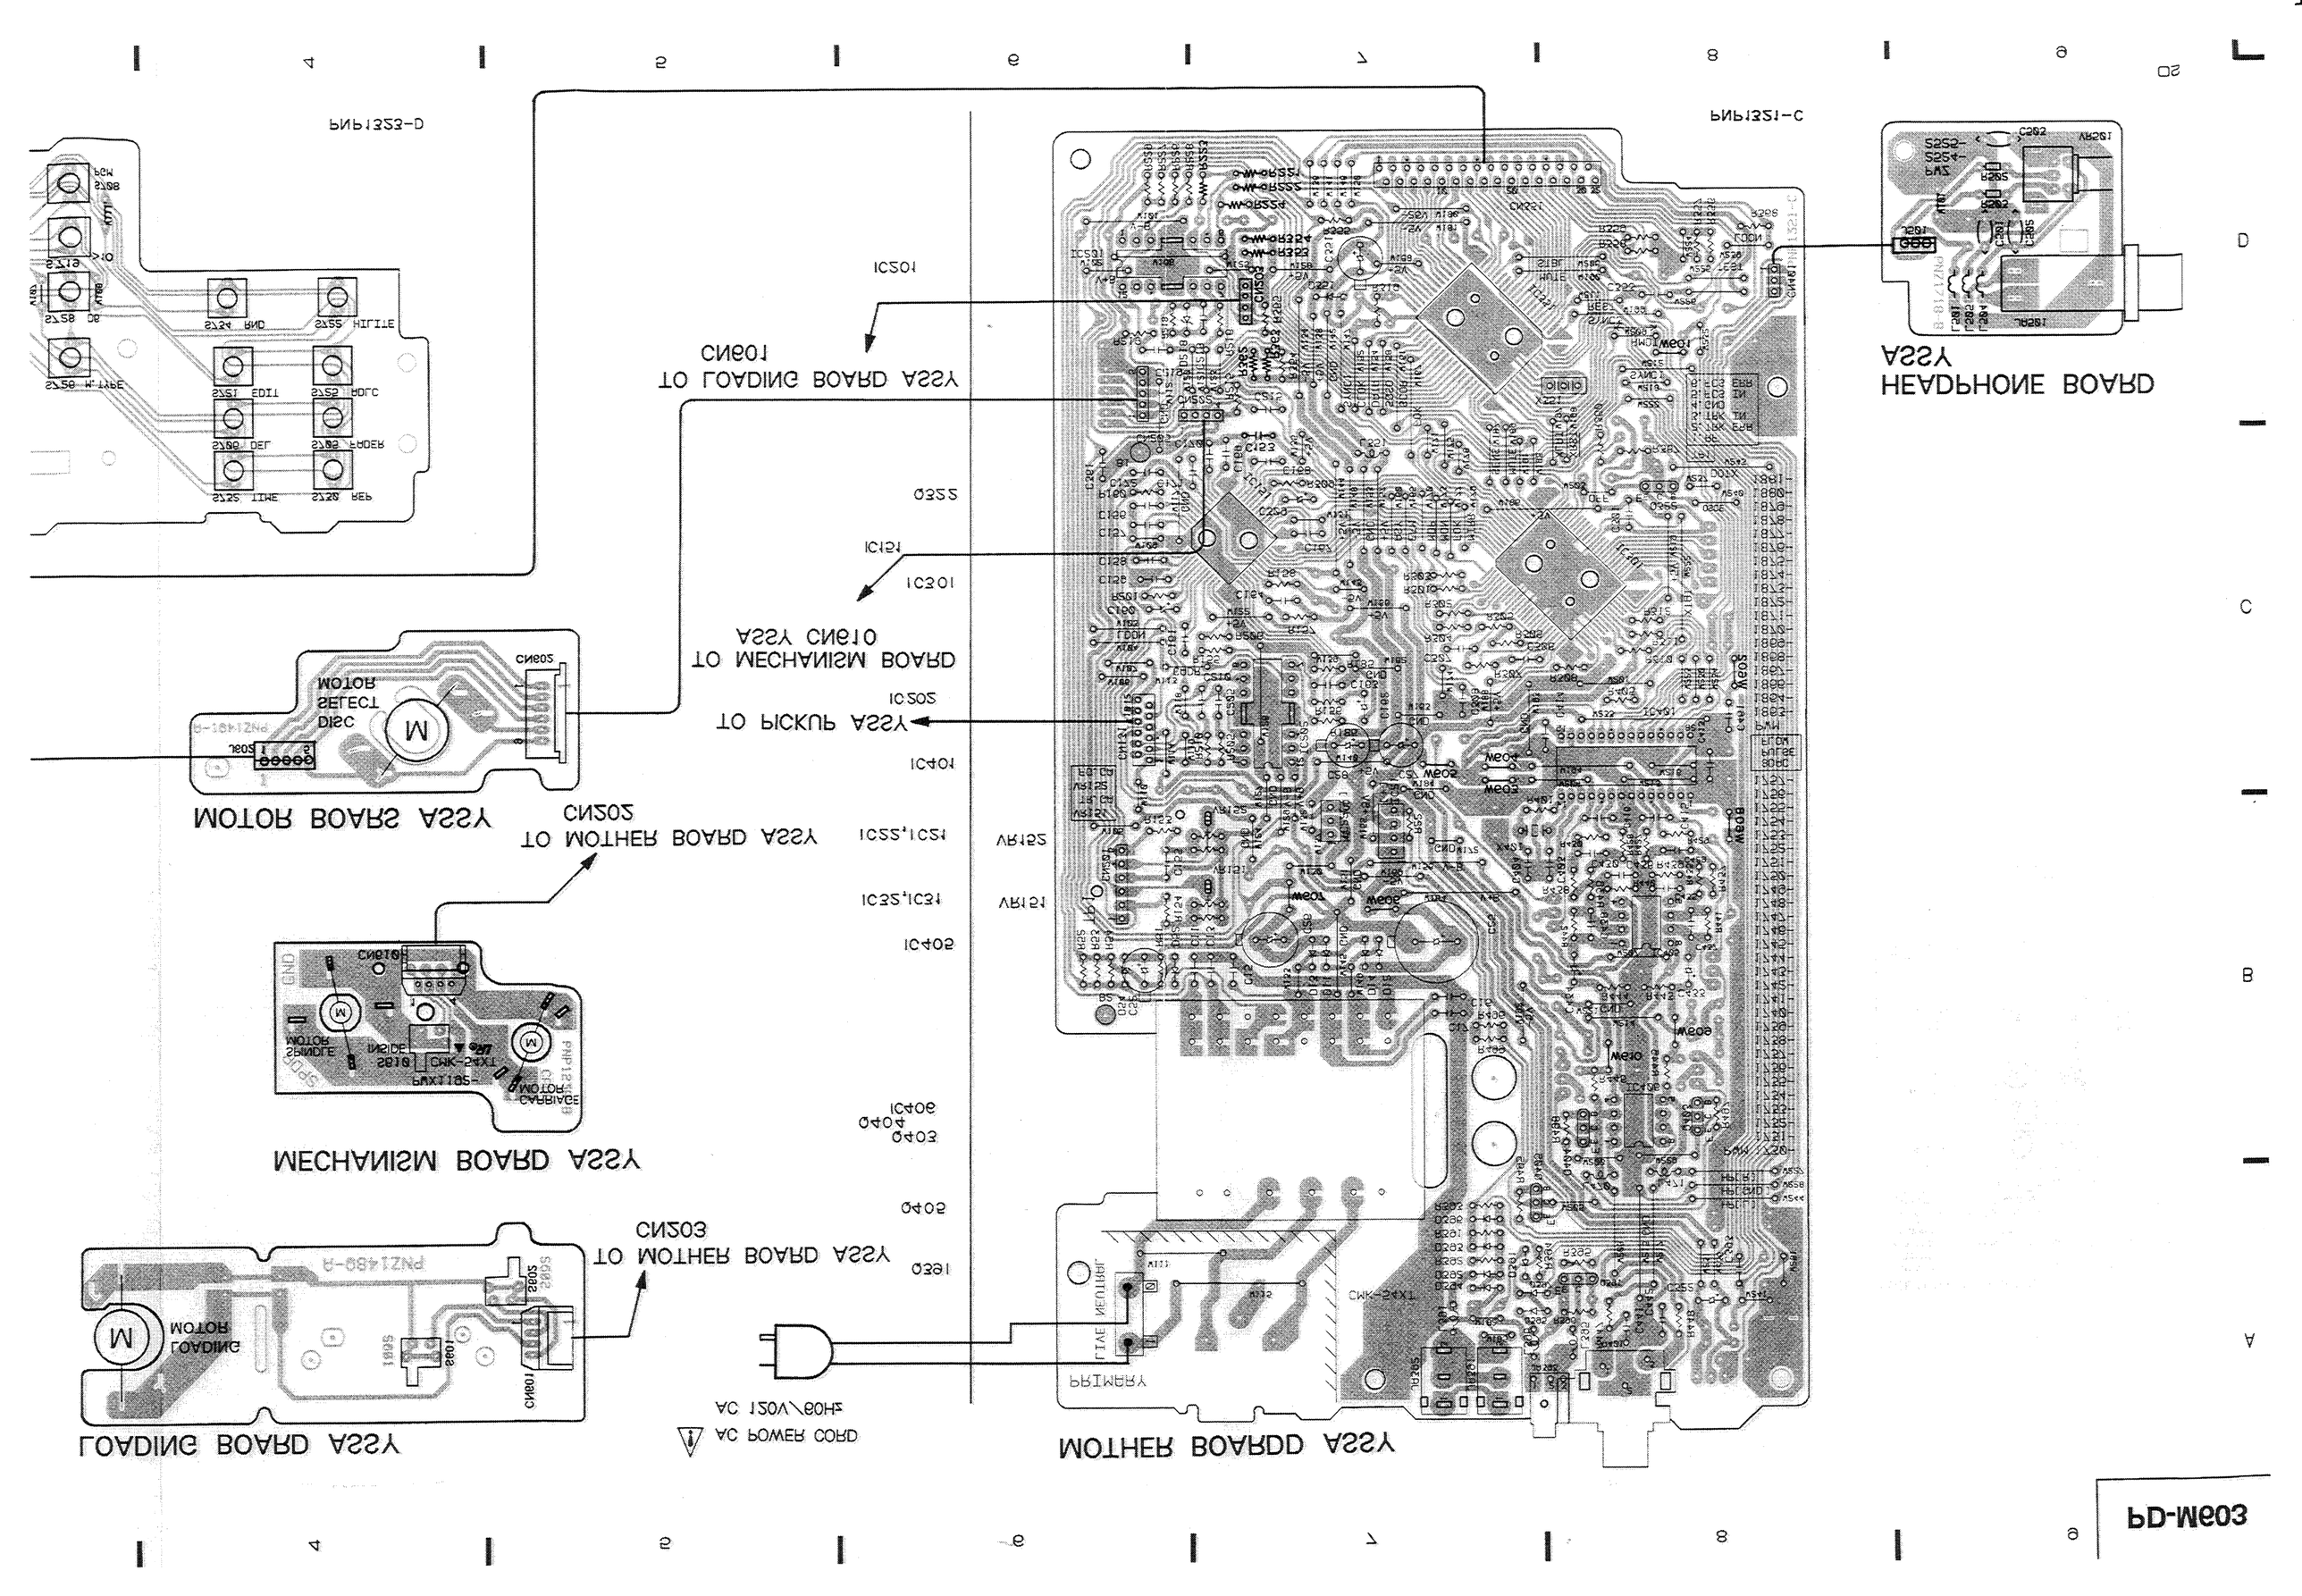
MOTHER BOARDD ASSY
PRIMARY
AC POWER CORD
AC 120V\60Hz
LOADING BOARD ASSY
MOTOR
LOADING
MECHANISM BOARD ASSY
MOTOR
DISC
SELECT
MOTOR BOARD ASSY
HEADPHONE BOARD
ASSY
TO LOADING BOARD ASSY
CN601
TO MECHANISM BOARD
ASSY CN610
TO PICKUP ASSY
CN502
TO MOTHER BOARD ASSY
CN503
TO MOTHER BOARD ASSY
CN505
TO MOTHER BOARD ASSY
IC501
IC301
IC401
IC402
IC403
IC404
IC405
IC502
IC503
IC504
IC505
IC506
IC507
IC508
IC509
IC510
IC511
IC512
IC513
IC514
IC515
IC516
IC517
IC518
IC519
IC520
IC521
IC522
IC523
IC524
IC525
IC526
IC527
IC528
IC529
IC530
IC531
IC532
IC533
IC534
IC535
IC536
IC537
IC538
IC539
IC540
IC541
IC542
IC543
IC544
IC545
IC546
IC547
IC548
IC549
IC550
IC551
IC552
IC553
IC554
IC555
IC556
IC557
IC558
IC559
IC560
IC561
IC562
IC563
IC564
IC565
IC566
IC567
IC568
IC569
IC570
IC571
IC572
IC573
IC574
IC575
IC576
IC577
IC578
IC579
IC580
IC581
IC582
IC583
IC584
IC585
IC586
IC587
IC588
IC589
IC590
IC591
IC592
IC593
IC594
IC595
IC596
IC597
IC598
IC599
IC600
IC601
IC602
IC603
IC604
IC605
IC606
IC607
IC608
IC609
IC610
IC611
IC612
IC613
IC614
IC615
IC616
IC617
IC618
IC619
IC620
IC621
IC622
IC623
IC624
IC625
IC626
IC627
IC628
IC629
IC630
IC631
IC632
IC633
IC634
IC635
IC636
IC637
IC638
IC639
IC640
IC641
IC642
IC643
IC644
IC645
IC646
IC647
IC648
IC649
IC650
IC651
IC652
IC653
IC654
IC655
IC656
IC657
IC658
IC659
IC660
IC661
IC662
IC663
IC664
IC665
IC666
IC667
IC668
IC669
IC670
IC671
IC672
IC673
IC674
IC675
IC676
IC677
IC678
IC679
IC680
IC681
IC682
IC683
IC684
IC685
IC686
IC687
IC688
IC689
IC690
IC691
IC692
IC693
IC694
IC695
IC696
IC697
IC698
IC699
IC700
IC701
IC702
IC703
IC704
IC705
IC706
IC707
IC708
IC709
IC710
IC711
IC712
IC713
IC714
IC715
IC716
IC717
IC718
IC719
IC720
IC721
IC722
IC723
IC724
IC725
IC726
IC727
IC728
IC729
IC730
IC731
IC732
IC733
IC734
IC735
IC736
IC737
IC738
IC739
IC740
IC741
IC742
IC743
IC744
IC745
IC746
IC747
IC748
IC749
IC750
IC751
IC752
IC753
IC754
IC755
IC756
IC757
IC758
IC759
IC760
IC761
IC762
IC763
IC764
IC765
IC766
IC767
IC768
IC769
IC770
IC771
IC772
IC773
IC774
IC775
IC776
IC777
IC778
IC779
IC780
IC781
IC782
IC783
IC784
IC785
IC786
IC787
IC788
IC789
IC790
IC791
IC792
IC793
IC794
IC795
IC796
IC797
IC798
IC799
IC800
IC801
IC802
IC803
IC804
IC805
IC806
IC807
IC808
IC809
IC810
IC811
IC812
IC813
IC814
IC815
IC816
IC817
IC818
IC819
IC820
IC821
IC822
IC823
IC824
IC825
IC826
IC827
IC828
IC829
IC830
IC831
IC832
IC833
IC834
IC835
IC836
IC837
IC838
IC839
IC840
IC841
IC842
IC843
IC844
IC845
IC846
IC847
IC848
IC849
IC850
IC851
IC852
IC853
IC854
IC855
IC856
IC857
IC858
IC859
IC860
IC861
IC862
IC863
IC864
IC865
IC866
IC867
IC868
IC869
IC870
IC871
IC872
IC873
IC874
IC875
IC876
IC877
IC878
IC879
IC880
IC881
IC882
IC883
IC884
IC885
IC886
IC887
IC888
IC889
IC890
IC891
IC892
IC893
IC894
IC895
IC896
IC897
IC898
IC899
IC900
IC901
IC902
IC903
IC904
IC905
IC906
IC907
IC908
IC909
IC910
IC911
IC912
IC913
IC914
IC915
IC916
IC917
IC918
IC919
IC920
IC921
IC922
IC923
IC924
IC925
IC926
IC927
IC928
IC929
IC930
IC931
IC932
IC933
IC934
IC935
IC936
IC937
IC938
IC939
IC940
IC941
IC942
IC943
IC944
IC945
IC946
IC947
IC948
IC949
IC950
IC951
IC952
IC953
IC954
IC955
IC956
IC957
IC958
IC959
IC960
IC961
IC962
IC963
IC964
IC965
IC966
IC967
IC968
IC969
IC970
IC971
IC972
IC973
IC974
IC975
IC976
IC977
IC978
IC979
IC980
IC981
IC982
IC983
IC984
IC985
IC986
IC987
IC988
IC989
IC990
IC991
IC992
IC993
IC994
IC995
IC996
IC997
IC998
IC999
IC1000

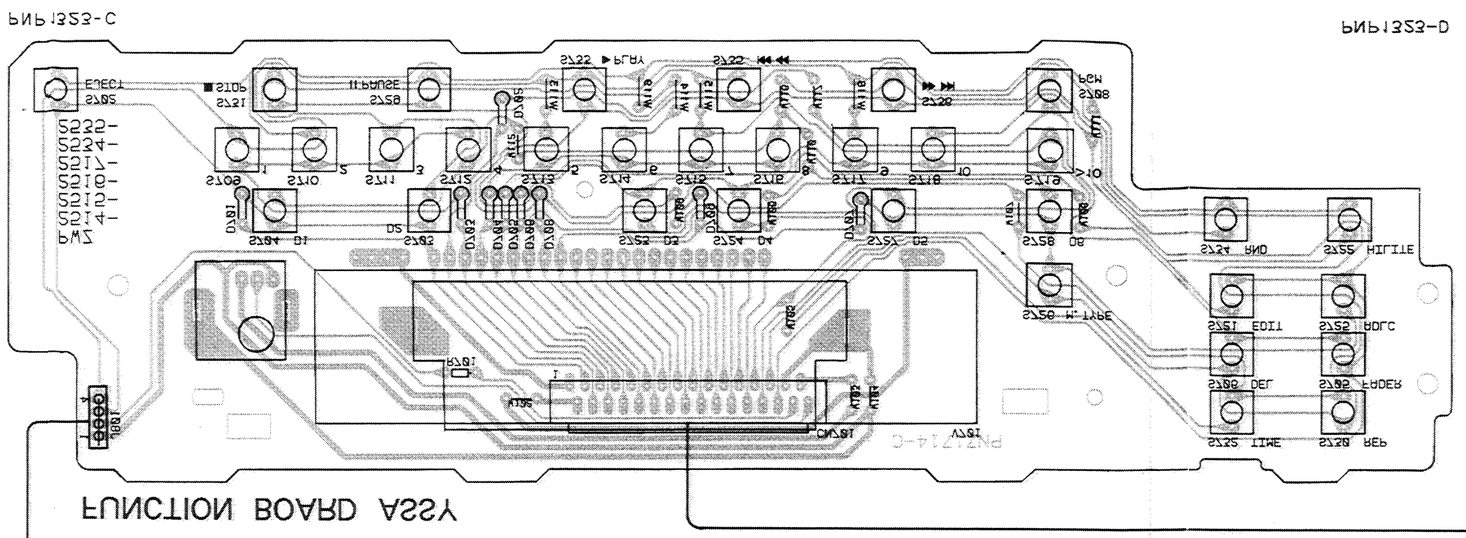

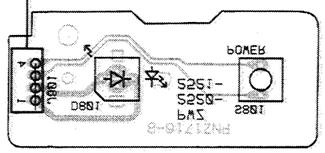

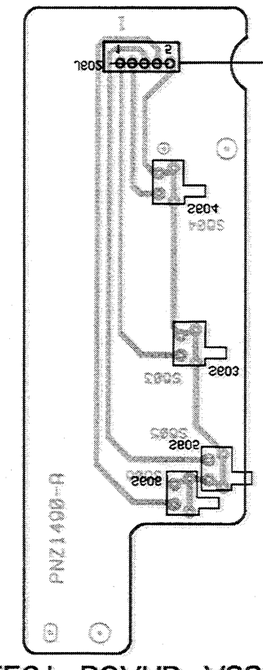

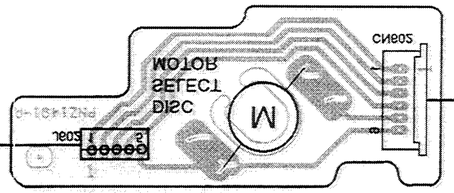

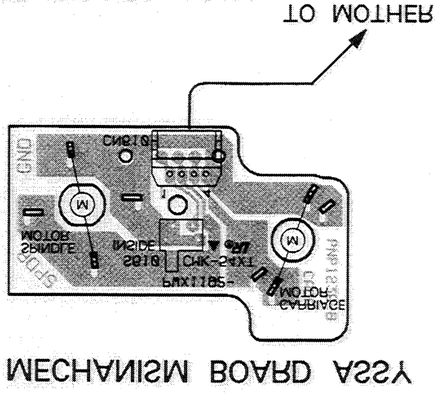

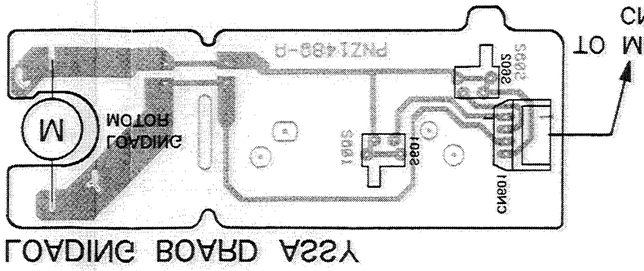

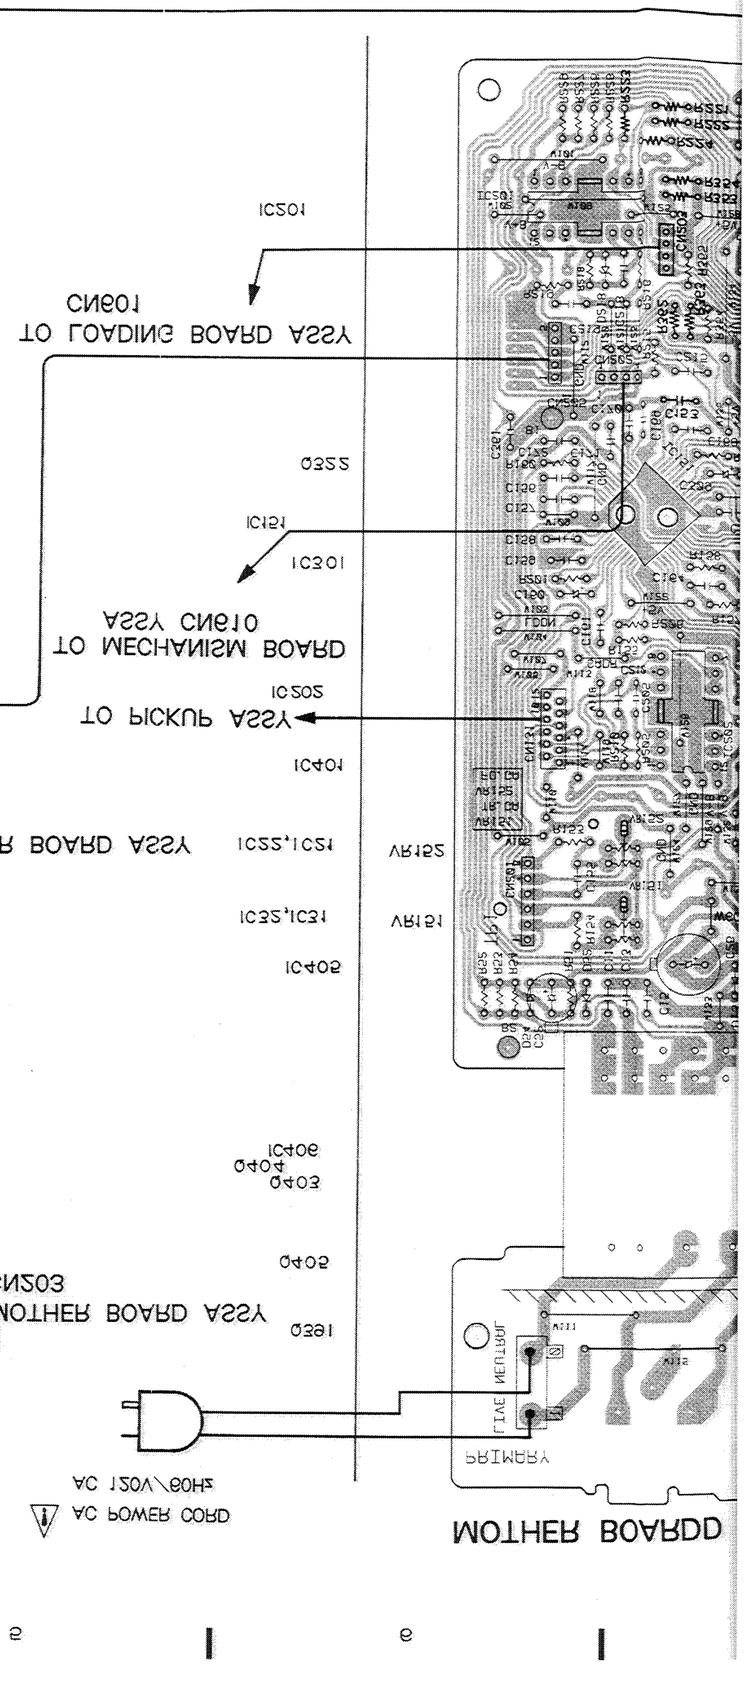

e. PCB CONNECTION DIAGRAM

• This diagram is viewed from the foil side.

7. PCB PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω → 56 × 10^1 → 561 ····· RD1/8PM[5][6][1]J
47k Ω → 47 × 10^3 → 473 ····· RD1/4PS[4][7][3]J
0.5 Ω → 0R5 ····· RN2H[0][R][5]K
1 Ω → 010 ····· RS1P[0][1][0]K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 × 10^1 → 5621 ····· RN1/4PC[5][6][2][1]F

Mark	No.	Description	Part No.
LIST OF ASSEMBLIES			
⚠		MOTHER BOARD ASSY	PWM1866
NSP		SUB BOARD ASSY	PWX1360
NSP		├ SWITCH BOARD ASSY	PWZ2520
NSP		├ HEADPHONE BOARD ASSY	PWZ2524
		└ FUNCTION BOARD ASSY	PWZ2814
NSP		MECHANISM BOARD ASSY	PWX1279
NSP		├ LOADING BOARD ASSY	PWZ2038
NSP		├ MOTOR BOARD ASSY	PWZ2040
NSP		└ SELECT BOARD ASSY	PWZ2533
NSP		MECHANISM BOARD ASSY	PWX1192
MOTHER BOARD ASSY			
SEMICONDUCTORS			
	IC151	SERVO IC	CXA1372Q
⚠	IC201, IC202	POWER OP-AMP IC	LA6520
⚠	IC21	REGULATOR, IC	PQ05RR12
⚠	IC22	REGULATOR IC	NJM79L05A
	IC301	EFM DEMODULATION IC	CXD2500BQ
	IC351	MICROCOMPUTER IC	PD4458A
	IC401	D/A CONVERTER IC	PD2026B(L)
	IC405	OP-AMP IC	NJM4565D-D
	IC406	OP-AMP IC	BA15218
	Q322	TRANSISTOR	DTC124ES
	Q391	TRANSISTOR	2SC1740S
	Q403, Q404	TRANSISTOR	2SD2144S
	Q405	TRANSISTOR	DTC124ES
⚠	D11-D14	DIODE	11ES2
	D351, D391	DIODE	1SS254
	D392-D397	DIODE	1SS254
⚠	D52	DIODE	11ES2
	D54	ZENNER DIODE	MTZJ18B
COILS AND FILTERS			
	L351	AXIAL INDUCTOR	LAU100K
	L391, L395	AXIAL INDUCTOR	LAU010K
	L396, L470	AXIAL INDUCTOR	LAU010K
	L471	AXIAL INDUCTOR	LAU010K
CAPACITORS			
	C11, C13	CERAMIC CAPACITOR	CKCYF103Z50
	C15	CERAMIC CAPACITOR	CKCYF103Z50
	C155	CERAMIC CAPACITOR	CKCYB102K50
	C156	CERAMIC CAPACITOR	CGCYX333K25
	C157	CERAMIC CAPACITOR	CGCYX103K25
	C158, C159	CERAMIC CAPACITOR	CGCYX104K25
	C16	CERAMIC CAPACITOR	CKCYF103Z50
	C160	ELECT. CAPACITOR	CEAS4R7M50
	C161	CERAMIC CAPACITOR	CGCYX104K25
	C162	ELECT. CAPACITOR	CEAS4R7M50
	C163	CERAMIC CAPACITOR	CGCYX104K25
	C164	CERAMIC CAPACITOR	CGCYX103K25
	C167	CERAMIC CAPACITOR	CKCYF103Z50
	C168	CERAMIC CAPACITOR	CGCYX333K25
	C169	CERAMIC CAPACITOR	CGCYX103K25
	C17	CERAMIC CAPACITOR	CKCYF103Z50
	C170	CERAMIC CAPACITOR	CKCYB332K50
	C171, C172	CERAMIC CAPACITOR	CKCYB472K50
	C205, C210	CERAMIC CAPACITOR	CKCYF103Z50
	C215	CERAMIC CAPACITOR	CKCYF103Z50
	C218	CERAMIC CAPACITOR	CGCYX103K25
	C219	CERAMIC CAPACITOR	CKCYF103Z50
	C25	ELECT. CAPACITOR	CEAS330M16
	C26	ELECT. CAPACITOR	CEAS100M16
	C27, C28	ELECT. CAPACITOR	CEAS330M16
	C301	CERAMIC CAPACITOR	CGCYX104K25
	C306	CERAMIC CAPACITOR	CKCYB102K50
	C307	CERAMIC CAPACITOR	CGCYX473K25
	C308	CERAMIC CAPACITOR	CGCYX103K25
	C309	ELECT. CAPACITOR	CEASR47M50
	C322	CERAMIC CAPACITOR	CKCYF103Z50
	C351	ELECT. CAPACITOR	CEAS47M6R3
	C353, C361	CERAMIC CAPACITOR	CKCYF103Z50

Mark	No.	Description	Part No.
	C393	CERAMIC CAPACITOR	CCCSL101J50
	C403	CERAMIC CAPACITOR	CCCCH120J50
	C404	CERAMIC CAPACITOR	CCCCH220J50
	C413-C416	AUDIO FILM CAPACITOR	CFTYA104J50
	C429, C430	CERAMIC CAPACITOR	CCCCH390J50
	C433, C434	CAPACITOR (ALUMINUM)	PCH1107
	C435-C438	CERAMIC CAPACITOR	CCCCH390J50
	C441, C442	FILM CAPACITOR	PCL1030
	C461	CERAMIC CAPACITOR	CKCYF103Z50
	C52	ELECT. CAPACITOR	CEAS101M35
RESISTORS			
	VR151, VR152	VR	PCP1030
	OTHER RESISTORS		RD1/6PM□□□J
OTHERS			
	CN131	CONNECTOR	12FMZ-ABT
	CN201	CONNECTOR 6P	RKP-533
	CN202	CONNECTER	VKN1051
	CN203	CONNECTOR 4P	4-173981-4
	CN204	6P JUMPER CONNECTOR	52147-0610
	CN351	CONNECTOR	9604S-32C
	CN401	3P JUMPER CONNECTOR	52147-0310
	JA391, JA392	JACK	RKN1004
	JA393	JACK	PKN1005
	JA401	JACK	PKB1009
	X351	CERAMIC RESONATOR	VSS1028
	X401	XTAL RES (OSC)	PSS1008
⚠	TERMINAL		RKC-061

SWITCH BOARD ASSY

SEMICONDUCTORS			
	D801	LED	PCX1019
SWITCHES AND RELAYS			
	S801	SWITCH	PSG1006

HEADPHONE BOARD ASSY

COILS AND FILTERS			
	L501, L504	AXIAL INDUCTOR	LAU010K
	L505	AXIAL INDUCTOR	LAU010K
CAPACITORS			
	C501, C502	CERAMIC CAPACITOR	CKCYF103Z50
	C503	CERAMIC CAPACITOR	CKCYF473Z50
RESISTORS			
	VR501	VARIABLE RESISTOR	PCS1003
	OTHER RESISTORS		RD1/6PM□□□J
OTHERS			
	JA501	JACK	RKN1002

FUNCTION BOARD ASSY

SEMICONDUCTORS			
	D701-D709	DIODE	1SS254
SWITCHES			
	S702-S706	SWITCH	PSG1006
	S708-S719	SWITCH	PSG1006
	S721-S736	SWITCH	PSG1006
RESISTORS			
	ALL RESISTORS		RD1/6PM□□□J
OTHERS			
	CN701	CONNECTOR	9604S-32F
	V701	FL INDICATOR TUBE	PEL1084
	REMOTE SENSOR		SBX1610-51

MECHANISM BOARD ASSY

SWITCHES AND RELAYS			
	S610	PUSH SWITCH	DSG1016
OTHERS			
	CN610	CONNECTOR 4P	VKN1061

LOADING BOARD ASSY

SWITCHES AND RELAYS			
	S601, S602	PUSH SWITCH	DSG1016
OTHERS			
	CN601	CONNECTOR 4P	4-173979-4

MOTOR BOARD ASSY

OTHERS			
	CN602	6PJUMPER CONNECTOR	52151-0610

SELECT BOARD ASSY

SWITCHES AND RELAYS			
	S603	DETECTOR SWITCH	PSG1010
	S604-S606	PUSH SWITCH	DSG1016

8. ADJUSTMENTS

8.1. Adjustment Methods

If a disc player is adjusted incorrectly or inadequately, it may malfunction or not work at all even though there is nothing at all wrong with the pickup or the circuitry. Adjust correctly following the adjustment procedure.

● Adjustment Items/Verification Items and Order

If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in steps 1 − 4, the pickup block may be defective.

Step	Item	Test Point	Adjustment Location
1	Focus offset verification	TP1, Pin 6 (FCS. ERR)	None
2	Tracking error balance verification	TP1, Pin 2 (TRK. ERR)	None
3	Pickup radial/tangential direction tilt adjustment	TP1, Pin 1 (RF)	Radial tilt adjustment screw, Tangential tilt adjustment screw
4	RF level verification	TP1, Pin 1 (RF)	None
5	Focus servo loop gain adjustment	TP1, Pin 5 (FCS. IN) TP1, Pin 6 (FCS. ERR)	VR152 (FCS. GAN)
6	Tracking servo loop gain adjustment	TP1, Pin 3 (TRK. IN) TP1, Pin 2 (TRK. ERR)	VR151 (TRK. GAN)

● **Abbreviation table**

FCS. ERR :Focus Error
TRK. ERR :Tracking Error
FCS GAN :Focus Gain
TRK GAN :Tracking Gain
FCS. IN :Focus In
TRK. IN :Tracking In

● Measuring Instruments and Tools

1. Dual trace oscilloscope (10:1 probe)
2. Low-frequency oscillator
3. Test disc (YEDS-7)
4. Low pass filter (39kΩ +0.001 μF)
5. Resistor (100kΩ)
6. Standard tools

● Test Point and Adjustment Variable Resistor Positions

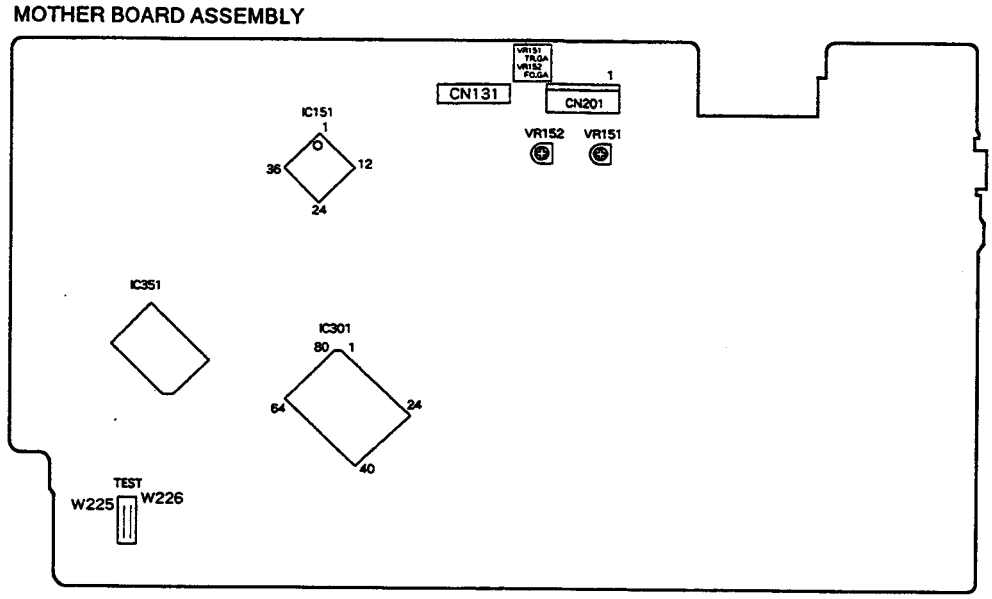

Figure 1. Adjustment Locations

● Notes

1. Use a 10:1 probe for the oscilloscope.
2. All the knob positions (settings) for the oscilloscope in the adjustment procedures are for when a 10:1 probe is used.

● Test Mode

These models have a test mode so that the adjustments and checks required for service can be carried out easily. When these models are in test mode, the keys on the front panel work differently from normal. Adjustments and checks can be carried out by operating these keys with the correct procedure. For these models, all adjustments are carried out in test mode.

[Setting these models to test mode]

How to set this model into test mode.
1. Unplug the power cord from the AC socket.
2. Short the test mode jumper wires. (See Figure 1.)
3. Plug the power cord back into the AC socket.

When the test mode is set correctly, the display is different from what it usually is when the power is turned on. If the display is still the same as usual, test mode has not been set correctly, so repeat Steps 1 – 3.

[Release from test mode]

Here is the procedure for releasing the test mode:

1. Press the STOP key and stop all operations.
2. Unplug the power cord from the AC socket.

[Operations of the keys in test mode]

Code	Key Name	Function in Test Mode	Explanation
	PGM (PROGRAM)	Focus servo close	The laser diode is lit up and the focus actuator is lifted up, then lowered slowly and the focus servo is closed at the point where the objective lens is focused on the disc. With the player in this state, if you lightly rotate the stopped disc by hand, you can hear the sound the focus servo. If you can hear this sound, the focus servo is operating correctly. If you press this key with no disc mounted, the laser diode lights up, the focus actuator is pulled up, then the actuator is lowered and raised three times and returned to its original position.
▷	PLAY	Spindle servo ON	Starts the spindle motor in the clockwise direction and when the disc rotation reaches the prescribed speed (about 500 rpm at the inner periphery), sets the spindle servo in a closed loop. Be careful. Pressing this key when there is no disc mounted makes the spindle motor run at the maximum speed. If the focus servo does not go correctly into a closed loop or the laser light shines on the mirror section at the outermost periphery of the disc, the same symptom is occurred.
▯▯	PAUSE	Tracking servo close/open	Pressing this key when the focus servo and spindle servo are operating correctly in closed loops puts the tracking servo into a closed loop, displays the track number being played back and the elapsed time on the front panel, and outputs the playback signal. If the elapsed time is not displayed or not counted correctly or the audio is not played back correctly, it may be that the laser is shining on the section with no sound recorded at the outer edge of the disc, that something is out of adjustment, or that there is some other problem. This key is a toggle key and open/close the tracking servo alternately. This key has no effect if no disc is mounted.

Code	Key Name	Function in Test Mode	Explanation
⏮ / ◁◁	TRACK / MANUAL SEARCH REV	Carriage reverse (inwards)	Moves the pickup position toward the inner diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
▷▷ / ⏭	TRACK / MANUAL SEARCH FWD	Carriage forward (outwards)	Moves the pickup position toward the outer diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
□	STOP	Stop	Initializes and the disc rotation stops. The pickup and disc remain where they are when this key is pressed.
⏏	EJECT	CD magazine eject	Stores Disc 1 in the CD magazine, then ejects the CD magazine. However, even though the CD magazine is ejected, the pickup does not return to the park position. Even if the CD magazine is mounted again, the pickup remains where it is.

Note : When inserting the magazine, disc 1 of the magazine is loaded automatically.

[How to play back a disc in test mode]

In test mode, since the servos operate independently, playing back a disc requires that you operate the keys in the correct order to close the servos.
Here is the key operation sequence for playing back a disc in test mode.

PGM(PROGRAM)	Lights up the laser diode and closes the focus servo.
⇩	
PLAY ▷	Starts the spindle motor and closes the spindle servo.
⇩	
PAUSE ▯▯	Closes the tracking servo.

Wait at least 2-3 seconds between each of these operations.

1. Focus Offset Verification

● Objective ● Symptom when out of adjustment	Verify the DC offset for the focus error amp. The model does not focus in and the RF signal is dirty.		
● Measurement instrument connections	Connect the oscilloscope to TP1, Pin 6 (FCS. ERR) [Settings] 5 mV/division 10 ms/division DC mode	● Player state ● Adjustment location ● Disc	Test mode, stopped (just the Power switch on) None None needed
[Procedure] Verify the DC voltage at TP1, Pin 6 (FCS. ERR) is 0 ± 50 mV.			

Note : If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in adjustment items 1 – 4, the pickup block may be defective.

2. Tracking Error Balance Verification

● Objective ● Symptom when out of adjustment	To verify that there is no variation in the sensitivity of the tracking photo diode. Play does not start or track search is impossible.		
● Measurement instrument connections	Connect the oscilloscope to TP1, Pin 2 (TRK. ERR). This connection may be via a low pass filter. [Settings] 50 mV/division 5 ms/division DC mode	● Player state ● Adjustment location ● Disc	Test mode, focus and spindle servos closed and tracking servo open None YEDS-7

[Procedure]

1. Move the pickup to midway across the disc (R=35 mm) with the TRACK / MANUAL SEARCH FWD ▷▷ · ▷▷| or REV |◁◁ · ◁◁ key.
2. Press the PGM (PROGRAM) key, then the PLAY ▷ key in that order to close the focus servo then the spindle servo.
3. Line up the bright line (ground) at the center of the oscilloscope screen and put the oscilloscope into DC mode.
4. Supposing that the positive amplitude of the tracking error signal at TP1, pin 2 (TRK ERR) is (A) and the negative amplitude is (B), the following expression is satisfied.

When $A \geqq B$, $\frac{A-B}{C} \times \frac{1}{2} \leqq 0.05$

When $A < B$, $\frac{B-A}{C} \times \frac{1}{2} \leqq 0.05$

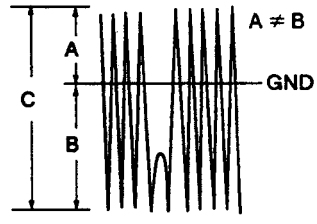

When there is a DC component

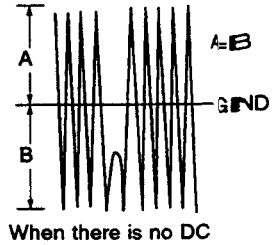

When there is no DC component

3. Pickup Radial/Tangential Tilt Adjustment

● Objective	To adjust the angle of the pickup relative to the disc so that the laser beams are shone straight down into the disc for the best read out of the RF signals.		
● Symptom when out of adjustment	Sound broken;some discs can be played but not others.		
● Measurement instrument connections	Connect the oscilloscope to TP1, Pin 1 (RF). [Settings] 20 mV/division 200 ns/division AC mode	● Player state ● Adjustment location ● Disc	Test mode, play Pickup radial tilt adjustment screw and tangential tilt adjustment screw YEDS-7

[Procedure]

1. Press the TRACK/MANUAL SEARCH FWD ▷▷ · ▷▷| or REV |◁◁ · ◁◁ key to move the pickup to halfway across the disc (R=35mm).
   Press the PGM (PROGRAM) key, the PLAY ▷ key, then the PAUSE ▯▯ key in that order to close the respective servos and put the player into play mode.
2. First, adjust the radial tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly.
3. Next, adjust the tangential tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly (Figure 3).
4. Adjust the radial tilt adjustment screw and the tangential tilt adjustment screw again so that the eye pattern can be seen the most clearly. As necessary, adjust the two screws alternately so that the eye pattern can be seen the most clearly.
5. When the adjustment is completed, lock the radial and tangential adjustment screw.
   Note:Radial and tangential mean the directions relative to the disc shown in Figure 2.

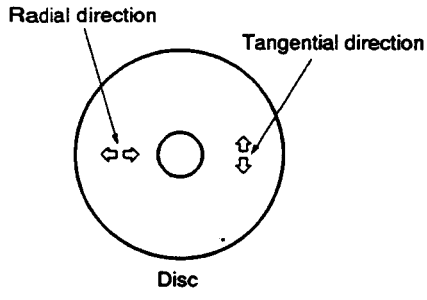

Figure 2

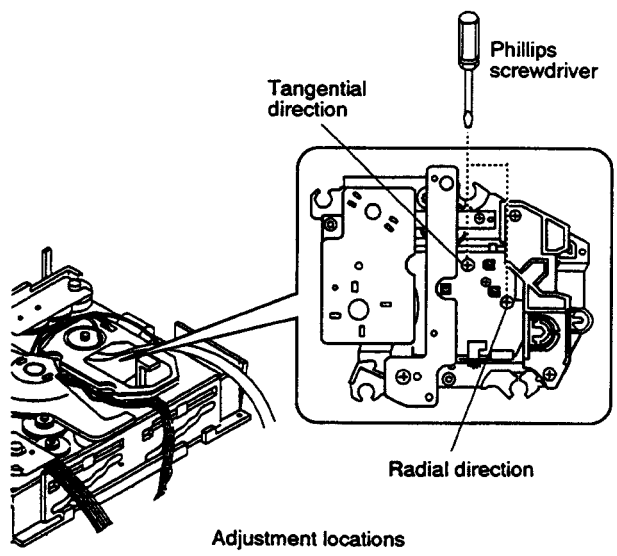

Adjustment locations

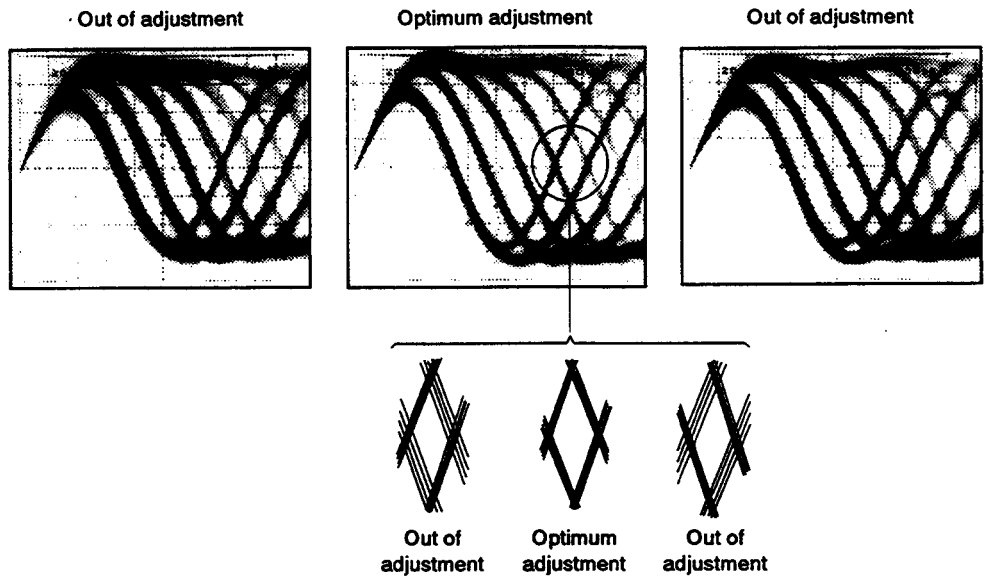

Figure 3. Eye pattern

4. RF Level Verification

● Objective ● Symptom when out of adjustment	To verify the playback RF signal amplitude No play or no search		
● Measurement instrument connections	Connect the oscilloscope to TP1, Pin 1 (RF). [Settings] 50 mV/division 10 ms/division AC mode	● Player state ● Adjustment location ● Disc	Test mode, play None YEDS-7

[Procedure]

1. Move the pickup to midway across the disc (R=35 mm) with the TRACK/MANUAL SEARCH FWD ▷▷ · ▷▷| or REV |◁◁ · ◁◁ key, then press the PGM (PROGRAM) key, the PLAY ▷ key, then the PAUSE ▯▯ key in that order to close the respective servos and put the player into play mode.
2. Verify the RF signal amplitude is 1.2 Vp-p ± 0.2 V.

5. Focus Servo Loop Gain Adjustment

● Objective	To optimize the focus servo loop gain.		
● Symptom when out of adjustment	Playback does not start or focus actuator noisy.		
● Measurement instrument connections	See figure 4. [Settings] CH1 CH2 20 mV/division 5 mV/division X-Y mode	● Player state ● Adjustment location ● Disc	Test mode, play VR152 (FCS. GAN) YEDS-7

[Procedure]

1. Set the AF generator output to 1.2 kHz and 1 Vp-p.
2. Press the TRACK/MANUAL SEARCH FWD ▷▷ • ▷▷| or REV |◁◁ • ◁◁ key to move the pickup to halfway across the disc (R=35 mm), then press the PGM (PROGRAM) key, the PLAY ▷ key, then the PAUSE ▯▯ key in that order to close the corresponding servos and put the player into play mode.
3. Adjust VR152 (FCS. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.

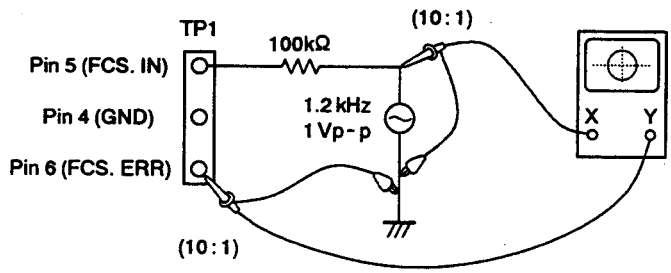

Figure 4

Focus Gain Adjustment

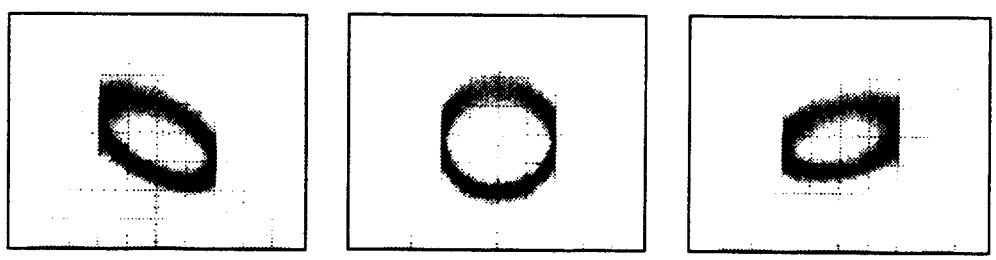

Higher gain | Optimum gain | Lower gain

6. Tracking Servo Loop Gain Adjustment

● Objective	To optimize the tracking servo loop gain.		
● Symptom when out of adjustment	Playback does not start, during searches the actuator is noisy, or tracks are skipped.		
● Measurement instrument connections	See Figure 5. [Settings] CH1 CH2 50 mV/division 20 mV/division X-Y mode	● Player state ● Adjustment location ● Disc	Test mode, play VR151 (TRK. GAN) YEDS-7

[Procedure]

1. Set the AF generator output to 1.2 kHz and 2 Vp-p.
2. Press the TRACK/MANUAL SEARCH FWD ▷▷ • ▷▷| or REV |◁◁ • ◁◁ key to move the pickup to halfway across the disc (R=35 mm), then press the PGM (PROGRAM) key, the PLAY ▷ key, then the PAUSE ▯▯ key in that order to close the corresponding servos and put the player into play mode.
3. Adjust VR151 (TRK. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.

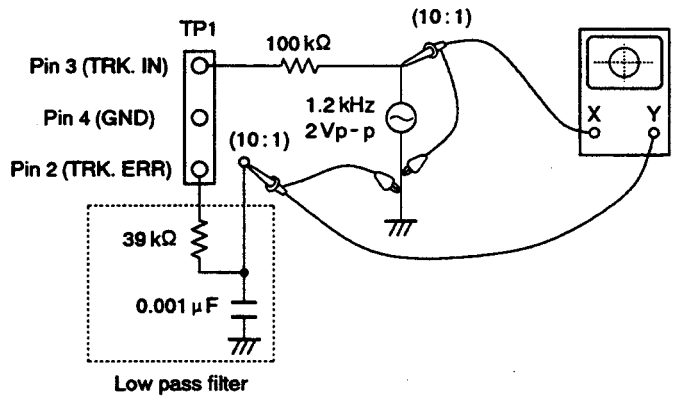

Figure 5

Tracking Gain Adjustment

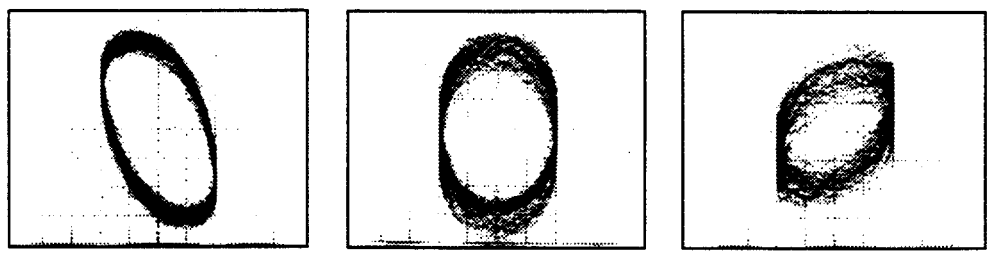

Higher gain | Optimum gain | Lower gain

9. PANEL FACILITIES

FRONT PANEL

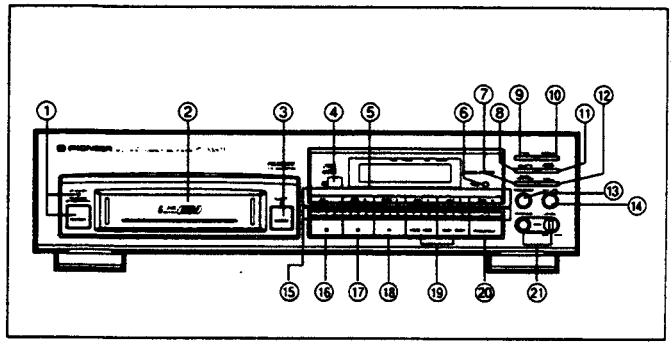

① POWER STANDBY/ON switch and STANDBY indicator
② Magazine insertion slot
③ EJECT button (⏏)
④ Remote sensor
Receives the signal from the remote control unit.
⑤ Disc number buttons (DISC 1~DISC 6)
⑥ MUSIC TYPE button
⑦ COMPU/TIME FADE button
⑧ DELETE button
⑨ TIME button
⑩ REPEAT button
⑪ AUTO FADER button
⑫ ADLC (Automatic Digital Level Controller) button
⑬ RANDOM play button
⑭ HI-LITE scan button
⑮ Digit buttons (1~10, >10)
⑯ Stop button (■)
⑰ Pause button (II)
⑱ Play button (►)
⑲ Track/Manual search buttons (I◄◄ ◄◄/►► ►►I)
⑳ PROGRAM button
㉑ Headphones jack (PHONES) and headphones volume control (PHONES LEVEL)

REMOTE CONTROL UNIT

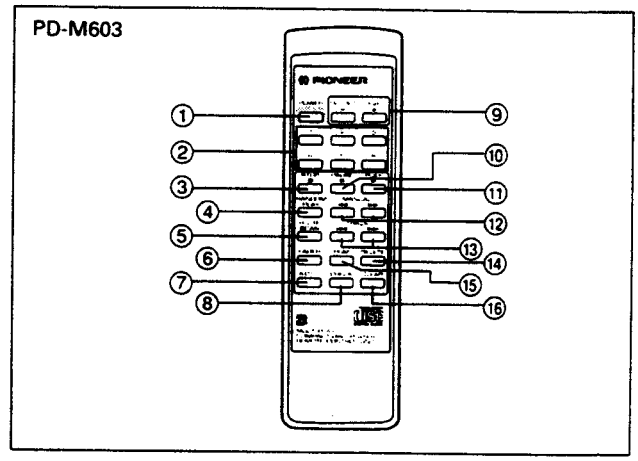

Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

① POWER button
② DISC NUMBER buttons (1~6)
③ STOP button (■)
④ RANDOM PLAY button
⑤ HI-LITE SCAN button
⑥ FADER button (PD-M603 only)
⑦ ADLC (Automatic Digital Level Controller) button
⑧ CHECK button
⑨ OUTPUT LEVEL buttons (+/–)
⑩ PAUSE button (II)
⑪ PLAY button (►)
⑫ MANUAL search buttons (◄◄/►►)
⑬ TRACK search buttons (I◄◄/►►I)
⑭ DELETE button
⑮ PGM (program) button
⑯ CLEAR button

10. SPECIFICATIONS

General

Type ..... Compact disc digital audio system
Power requirements ..... AC 120 V, 60 Hz
Power consumption ..... 12 W
Operating temperature ..... +5°C~+35°C
(+41°F~+95°F)
Weight ..... 3.8 kg (8 lb, 6 oz)
External dimensions ..... 420 (W) x 299 (D) x 105 (H) mm

Audio section

Frequency response ..... 2 Hz-20 kHz
S/N ratio
PD-M703 ..... 102 dB or more (EIAJ)
PD-M603 ..... 98 dB or more (EIAJ)
Dynamic range ..... 96 dB or more (EIAJ)
Harmonic distortion ..... 0.003% or less (EIAJ)
Output voltage ..... 2.0 V
Wow and flutter ..... Limit of measurement
(±0.001% W. PEAK) or less (EIAJ)
Channels ..... 2-channel (stereo)

Output terminal

Audio line output
Headphone jack with volume control
Control input/output jacks
CD-DECK SYNCHRO jack

Accessories

- Remote control unit 1
- AAA/R03 dry cell batteries 2
- 6-compact-disc magazine 1
- Control cable 1
- Output cable 1
- Operating instructions 1

NOTE:
Specifications and design subject to possible modification without notice, due to improvements.

The Magazine Type Multi-Play CD Players with mark and the Magazines with the same mark are compatible for 12 cm discs.

PIONEER

The Art of Entertainment